

JAPAN

System	Sys. Info.	Read-Clear Dtc	Data Stream	Actuation	Special Functions	Others
--------	------------	-------------------	----------------	-----------	-------------------	--------

MITSUBISHI 73 TRUCK

ENGINE	<i>Info</i>	<i>err. Code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. Code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI CLIPPER

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI COLT

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
4WS/EPS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI COLT PLUS

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
4WS/EPS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
POWER GATE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI DELICA D:5

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Provisional DTCs(*) 2.Learned value reset(*) 3.Learning 4.Ethanol forced learning mode 5.ECU Information	1. READINESS TEST 2. CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Clear CVT oil level(*) 2.ECU Information	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Emission test mode(*) 2.SAS calibration(*) 3.ECU Information 4.Frozen key	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Head lamp Auto leveling Diag mode(*) 2.Service reminder(*) 3.ECU Information	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.personalization(*) 2. Personalization information(*) 3. Reset personalization(*) 4. Alarm record (optional)(*) 5.ECU Information	
SAS	<i>Info</i>	<i>err. code</i>			1.SAS calibration(*)	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Password change(*) 2. Key registration (bar code number)(*) 3. Key&KOS (Keyless Operation System) key registration(*) 4.Steering lock unit Reg. 5.Comm.Test 6.ENG key code Reg. 7.ENG key code&Chassis No.Reg. 8.ECU Information	1.CODING

AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AFS/ACL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
CAMERA	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
POWER GATE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Rain Sensor Error	
ELECTRIC SLIDE DOOR	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MULTI SELECT 4WD	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI DELICA SPACE GEAR

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ECS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI VAN / CARGO / TRUCK

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI EK-WAGON (H81W)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI EK-WAGON (H82W)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI GALANT FORTIS

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Provisional DTCs(*) 2.Learned value reset(*) 3.Learning 4.Ethanol forced learning mode 5.ECU Information	1. READINESS TEST 2. CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>		1. Clear CVT oil level(*) 2.ECU Information	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Emission test mode(*) 2.SAS calibration(*) 3.ECU Infromation 4.Frozen key	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Head lamp Auto leveling Diag mode(*) 2.Service reminder(*) 3.Test 4.ECU Information	

ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Alarm record (optional)(*) 5.ECU Information	
SAS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.SAS calibration(*) 2.ECU Information	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3. Key&KOS (Keyless Operation System) key registration(*) 4.Steering lock unit Reg. 5.Comm.Test 6.ENG key code Reg. 7.ENG key code&Chassis No.Reg. 8.Key Registration 9.Keyless ID Reg. 10.ECU Information	1.CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
4WS/ELECTRIC POWER STEERING	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AFS/ACL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AYC/ACD	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Sensor calibration(*) 2.Air bleeding 3.Test 4.ECU Information	
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Rain Sensor Error	
MULTI SELECT 4WD	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AUDIO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SHIFT LEVER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	

MITSUBISHI GALANT FORTIS SPORTBACK (CX)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Provisional DTCs(*) 2.Learned value reset(*) 3.Learning 4.Ethanol forced learning mode	1. READINESS TEST 2. CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Clear CVT oil level(*)	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Emission test mode(*) 2.SAS calibration(*)	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Head lamp Auto leveling Diag mode(*) 2. Service reminder(*)	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Alarm record (optional)(*)	
STEERING ANGLE SENSOR	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.SAS calibration(*)	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Password change 2. Key registration (bar code number) 3. Key&KOS (Keyless Operation System) key registration 4.Steering lock unit Reg. 5.Comm.Test 6.ENG key code Reg. 7.ENG key code&Chassis No.Reg. 8.Key Registration 9.Keyless ID Reg.	1.CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AFS/ACL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

AYC/ACD	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Sensor calibration(*) 2.Air bleeding 3.Test	
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MULTI SELECT 4WD	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AUDIO	<i>Info</i>	<i>err. code</i>	<i>data</i>			
SHIFT LEVER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MITSUBISHI GRANDIS						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SAS	<i>Info</i>	<i>err. code</i>	<i>data</i>			
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Key registration (key used) 2.Key registration (bar code number)(*) 3.ENG key code&Chassis No.Reg. 4.Password change(*)	1.CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
CAMERA	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

POWER GATE	<i>Info</i>	<i>err. code</i>				
DISPLAY	<i>Info</i>	<i>err. code</i>				
KEYLESS OPERATION	<i>Info</i>	<i>err. code</i>				
MULTI SELECT 4WD	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MITSUBISHI I - MIEV						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Learned value reset(*)	1.READINESS TEST
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Learned value reset	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Service reminder(*)	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Keyless ID registration(*) 5.Keyless reception check(*)	1.CODING
4WS/EPS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			
KEYLESS OPERATION	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Keyless Operation System key registration 2.Steering lock unit Reg. 3.Comm.Test 4.KOS Personalization information	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Service reminder(*) 2.Test	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Keyless ID registration(*) 5.Keyless reception check(*)	1.CODING
4WS/EPS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			
KEYLESS OPERATION	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Keyless Operation System key registration 2.Steering lock unit Reg. 3.Comm.Test 4.KOS Personalization information	
EV-ECU	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization	
BMU	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Test	
COMP&HTR	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Compressor drive history reset	
MCU	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI LANCER

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AYC/ACD	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI LANCER CARGO

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MITSUBISHI LANCER EVOLUTION (CZ)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Provisional DTCs(*) 2.Learned value reset(*) 3.Learning 4.Ethanol forced learning mode	1. READINESS TEST 2. CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Emission Gas Mode(*) 2.Sensor calibration(*)	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Head lamp Auto leveling Diag mode(*) 2. Service reminder(*)	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Alarm record	
STEERING ANGLE	<i>Info</i>	<i>err. code</i>			1.SAS calibration(*)	

IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Password change(*) 2. Key registration (bar code number)(*) 3. Key&KOS (Keyless Operation System) key registration(*) 4. Steering lock unit Reg. 5. Comm. Test 6. ENG key code Reg. 7. ENG key code&Chassis No. Reg. 8. Key Registration 9. Keyless ID Reg.	1. CODING
AFS/ACL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AYC/ACD	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>		1. Rain Sensor Adaptation	
AUDIO	<i>Info</i>	<i>err. code</i>	<i>data</i>			
HFM	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SHIFT LEVER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MITSUBISHI LANCER WAGON						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Key registration (key used) 2.Key registration (bar code number)(*) 3.ENG key code&Chassis No.Reg. 4.Password change(*)	1.CODING
AYC/ACD	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI MINICA

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Emission Gas Mode(*) 2.Sensor calibration(*) 3.Yaw rate sensor type reset	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI MINICAB / TOWNBOX

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Emission Gas Mode(*) 2.Sensor calibration(*) 3.Yaw rate sensor type reset	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI OTTI (H91W)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Emission Gas Mode 2.Sensor calibration 3.Yaw rate sensor type reset	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MITSUBISHI OTTI (H92W)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Emission Gas Mode 2.Sensor calibration 3.Yaw rate sensor type reset	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MITSUBISHI OUTLANDER						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Provisional DTCs 2.Learned value reset 3.Learning 4.Ethanol forced learning mode	1. READINESS TEST 2. CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Clear CVT oil level	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Emission test mode 2. All sensors calibration	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Head lamp Auto leveling Diag mode 2. Service reminder 3.Test	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.personalization 2.Personalization information 3.Reset personalization 4.Alarm record (optional)	
SAS	<i>Info</i>	<i>err. code</i>			SAS calibration	

IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Password change 2. Key registration (bar code number) 3. Key&KOS (Keyless Operation System) key registration 4. Steering lock unit Reg. 5. Comm. Test 6. ENG key code Reg. 7. ENG key code&Chassis No. Reg. 8. Key Registration 9. Keyless ID Reg.	1. CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>		Rain Sensor Adaptation	
MULTI SELECT 4WD	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AUDIO	<i>Info</i>	<i>err. code</i>	<i>data</i>			
MITSUBISHI PAJERO (V6,V7)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Emission Gas Mode 2. Sensor calibration 3. Yaw rate sensor type reset	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Key registration (key used) 2. Key registration (bar code number) 3. ENG key code&Chassis No. Reg. 4. Password change	1. CODING

TCL/STABILITY CONTROL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SS4II	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
HBB	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MITSUBISHI PAJERO (V8,V9)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Test 2.Learning 3.Initialization 4.Injector ID Write(exchanged injector) 5.Read Injector ID 6.DPF regeneration 7.Write learned value(Changed ECU) 8.Temporary DTCs 9.Learning value reset	1. READINESS TEST 2. CODING
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Emission Gas Mode 2.Sensor calibration 3.Yaw rate sensor type reset	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	Service reminder	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Key registration (key used) 2.Key registration (bar code number) 3.ENG key code&Chassis No.Reg. 4.Password change	1.CODING
SS4II	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

HBB	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
DISPLAY	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptation 2.Test(INVECS-2 control stopped)	
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			

MITSUBISHI PAJERO IO

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Emission Gas Mode 2.Sensor calibration 3.Yaw rate sensor type reset	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI PAJERO MINI

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Emission Gas Mode 2.Sensor calibration 3.Yaw rate sensor type reset	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI TOPPO

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MITSUBISHI TRITON						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Temporary DTCs 2. Reset adaptation	1. CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Reset adaptation 2. Test(INVECS-2 control stopped)	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1. personalization 2. Personalization information 3. Reset personalization 4. Keyless ID registration 5. Keyless reception check	1. CODING
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Key registration (key used) 2. Key registration (bar code number) 3. ENG key code&Chassis No.Reg. 4. Password change	1. CODING
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			
DISPLAY	<i>Info</i>	<i>err. code</i>				
EURO						
MITSUBISHI COLT CZC						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	Temporary DTCs	1. READINESS TEST 2. CODING
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Emission Gas Mode 2. Sensor calibration 3. Yaw rate sensor type reset	1. CODING

SRS	<i>Info</i>	<i>err. code</i>				
AC	<i>Info</i>	<i>err. code</i>				
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		1.CODING
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>			
4WS/EPS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		1.CODING
DISPLAY	<i>Info</i>	<i>err. code</i>				
RHT/TOPSTACK	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Learning 2.Function test	1.CODING

MITSUBISHI COLT, COLT CZ3 / CZT

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	Temporary DTCs	1. READINESS TEST 2. CODING
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Emission Gas Mode 2.Sensor calibration 3.Yaw rate sensor type reset	1.CODING
SRS	<i>Info</i>	<i>err. code</i>				
AC	<i>Info</i>	<i>err. code</i>				
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		1.CODING
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>			
4WS/EPS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		1.CODING
DISPLAY	<i>Info</i>	<i>err. code</i>				
AT	<i>Info</i>	<i>err. code</i>				

MITSUBISHI GALANT (DJ)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Temporary DTCs 2.Reset adaptation	1. READINESS TEST 2. CODING
--------	-------------	------------------	-------------	----------------	--	--------------------------------

AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptation 2.Test	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	Sensor calibration	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ETACS	<i>Info</i>	<i>err. code</i>				
STEERING ANGLE SENSOR	<i>Info</i>	<i>err. code</i>				
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Key registration (key used) 2.Key registration (bar code number) 3.ENG key code&Chassis No.Reg. 4.Password change	1.CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
DISPLAY	<i>Info</i>	<i>err. code</i>				
MITSUBISHI GRANDIS						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	Service reminder	
ETACS	<i>Info</i>	<i>err. code</i>		<i>Actuat.</i>		

SAS	<i>Info</i>	<i>err. code</i>				
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Key registration (key used) 2.Key registration (bar code number) 3.ENG key code&Chassis No.Reg. 4.Password change	1.CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
DISPLAY	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptation	1.READINESS TEST
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptation	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Service reminder	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.personalization 2.Personalization information 3.Reset personalization 4.Keyless ID registration 5.Keyless reception check	1.CODING
4WS/EPS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			
KEYLESS OPERATION	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Keyless Operation System key registration 2.Steering lock unit Reg. 3.Comm.Test 4.KOS Personalization information	

MITSUBISHI L200 (K6,K7)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Emission Gas Mode 2.Sensor calibration 3.Yaw rate sensor type reset	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ETACS	<i>Info</i>	<i>err. code</i>		<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Key registration (key used) 2.Key registration (bar code number) 3.ENG key code&Chassis No.Reg. 4.Password change	1.CODING
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MITSUBISHI L200 (KB)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Initialization(Supply pump exchange service)(*) 2. Test(Fuel system leak detection)(*) 3. Learning(Micro injection adaptation)(*) 4. Injector ID copy (injector exchange)(*) 5. Read injector 4 ID(*)	1.CODING
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.personalization(*) 2. Personalization information(*) 3. Reset personalization(*) 4. Keyless ID registration(*) 5. Keyless reception check(*)	1.CODING

IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Key registration (key used) 2.Key registration (bar code number) 3.ENG key code&Chassis No.Reg. 4.Password change	1.CODING
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptation 2.Test(INVECS-2 control stopped)	
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SAS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.SAS calibration	
DISPLAY	<i>Info</i>	<i>err. code</i>				

MITSUBISHI L300

MITSUBISHI LANCER (CS, CT)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AYC/ACD	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI LANCER (CY)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Temporary DTCs(*) 2.Reset adaptation(*)	1. READINESS TEST 2. CODING
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Head lamp Auto leveling Diag mode(*) 2. Service reminder(*)	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Alarm record (optional)(*)	
SAS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.SAS calibration(*)	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password Change 2.Key registration 3.Key registration (bar code number) 4.Keyless ID registration 5.Engine key code registration 6.ENGINE KEY CODE REG.&VIN	
4WS/EPS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AUDIO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AFS/ACL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
HFM	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
MITSUBISHI WAGON						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MITSUBISHI OUTLANDER (CU)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
MITSUBISHI OUTLANDER (CW)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST 2. CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Clear CVT oil level (*)	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Emission test mode(*) 2. All sensors calibration(*)	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Head lamp Auto leveling Diag mode(*) 2. Service reminder(*)	

ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Alarm record (optional)(*)	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			
MULTI SELECT 4WD	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AUDIO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SAS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
HFM	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MITSUBISHI PAJERO / MONTERO (V6, V7)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>			
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.key registration(*) 2.Tester number display 3.Change Password(*)	
SS4II	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
HBB	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			

TCL/STABILITY CONTROL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MITSUBISHI PAJERO / MONTERO (V8, V9)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Temporary DTCs(*) 2.Learned value reset(*) 3.ECU Information 4.TEST 5.OBD Test Result 6.Initialize 7.Write Injector ID(ECU Switched/Injector Switched) 8.reading Injector ID	1. READINESS TEST 2. CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Learned value reset 2.Test 3.ECU Information	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Serve Reminder(*)	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>			1.CODING
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information 2.ReSet PassWord(*) 3.Register Key 4.ENGINE KEY CODE REG.&VIN WRITING	1.CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
SS4II	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
DISPLAY	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
MITSUBISHI PAJERO SPORT / MONTERO SPORT						

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>			
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MITSUBISHI PAJERO SPORT / MONTERO SPORT (KH)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information 2.Temporary DTCs(*) 3.TEST 4.Initialize(*) 5.Write Injector ID(ECU Switched/Injector Switched) 6.Reading Injector ID 7.Learned value reset(*)	1.READINESS TEST 2.CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Learned value reset 3.Test	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Lateral G Sensor Calibratio	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information 2.personalization(*) 3.Reset personalization(*) 4.Short of key ID registration(*)	1.CODING

SAS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information 2.SAS Calibration(*)	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information 2.Key Registration 3.ENGINE KEY CODE REG.&VIN WRITING 4.Reset Password(*)	1.CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
DISPLAY	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	

USA

MITSUBISHI ECLIPSE

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Temporary DTCs(*) 3.Learned value reset(*)	1. READINESS TEST 2. CODING
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Temporary DTCs(*) 3.Learned value reset	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Learned Value Reset 3.Test	
TCL/STABILITY	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	

TPMS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Tire pressure sensor identification register(*) 2.Tire pressure sensor confirmation check(*) 3.Tire pressure sensor confirmation check(REQUIRES TOOL)(*)	
SAS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
MITSUBISHI ECLIPSE SPYDER						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Temporary DTCs(*) 3.Learned value reset(*)	1. READINESS TEST 2. CODING
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Sensor Calibratio(*)	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Key Registration 3.ENGINE KEY CODE REG.&VIN WRITING	1.CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
RHT/TOPSTACK	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Test 3.Learned Value Reset	
TCL/STABILITY	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	

TPMS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Tire pressure sensor identification register(*) 2.Tire pressure sensor confirmation check(*) 3.Tire pressure sensor confirmation check(REQUIRES TOOL)(*) 4.ECU Information	
SAS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
MITSUBISHI ENDEAVOR						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2. Temporary DTCs(*) 3. Learned value reset(*)	1. READINESS TEST 2. CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Test 3.Learned Value Reset	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
ETACS	<i>Info</i>	<i>err. code</i>			1.ECU Information	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Key Registration 3.ENGINE KEY CODE REG.&VIN	1.CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	

TPMS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Tire pressure sensor identification register(*) 3.Tire pressure sensor confirmation check(*) 4.Tire pressure sensor confirmation check(REQUIRES TOOL)(*)	
TCL/STABILITY	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
DISPLAY	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
SAS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
MITSUBISHI GALANT						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Temporary DTCs(*) 3.Learned value reset(*)	1. READINESS TEST 2. CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Test 3.Learned Value Reset	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Sensor Calibratio(*)	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Key Registration 3.ENGINE KEY CODE REG.&VIN WRITING	
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	

TPMS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 1.Tire pressure sensor identification register(*) 2.Tire pressure sensor confirmation check(*) 3.Tire pressure sensor confirmation check(REQUIRES TOOL)(*)	
DISPLAY	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
TCL/STABILITY	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	

MITSUBISHI LANCER (CS, CT)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AYC/ACD	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI LANCER (CY)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Temporary DTCs(*) 3.Learned value reset(*) 4.Ethanol forced learning mode	1. READINESS TEST 2. CODING
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 1.Emission test mode(*) 2.All sensors calibration(*) 3.Frozen Keys	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	

METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Head lamp Auto leveling Diag mode(*) 2.Service reminder(*) 3.Test 4.ECU Information	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Alarm record (optional)(*)	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Reset Password(*) 3.Key Registration 4.Short of key ID Registration (*) 5.ENGINE KEY CODE REG.&VIN WRITING	1.CODING
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AUDIO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
OCM	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Zero Calibratio&Sys Check	
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
HFM	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SATELLITE RADIO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Zero Calibratio&Sys Check	
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Clear CVT oil level (*)	1.CODING
MITSUBISHI LANCER EVOLUTION						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Temporary DTCs(*) 3.Learned value reset(*) 4.Ethanol forced learning mode	1. READINESS TEST 2. CODING

AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	1.CODING
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Emission Gas Mode(*) 3.Sensor calibration(*)	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Head lamp Auto leveling Diag mode(*) 2.Service reminder(*) 3.Test 4.ECU Information	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Alarm record (optional)(*)	
SAS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information 2.SAS calibration(*)	1.CODING
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Reset Password(*) 3.Key Registration 4.Short of key ID Registration (*) 5.ENGINE KEY CODE REG.&VIN WRITING	1.CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
AYC/ACD	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information 2.Sensor Calibratio 3.Air bleeding 4.Test	
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AUDIO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	

HFM	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
OCM	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Zero Calibratio&Sys Check	
SATELLITE RADIO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Zero Calibratio&Sys Check	
SHIFT LEVER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	

MITSUBISHI LANCER SPORTBACK (CS)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>			
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI LANCER SPORTBACK (CX)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Temporary DTCs(*) 3.Learned value reset(*) 4.Ethanol forced learning mode	1. READINESS TEST 2. CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Clear CVT oil level (*)	1.CODING
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Emission Gas Mode(*) 3.Sensor calibration(*) 4.Forzen Key	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1 Head lamp Auto leveling Diag mode(*) 2.Service reminder(*) 3.ECU Information	

ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Alarm record (optional)(*)	
SAS	<i>Info</i>	<i>err. code</i>			1.ECU Information 2.SAS calibration(*)	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Reset Password(*) 3.Key Registration 4.Short of key ID Registration(*) 5.ENGINE KEY CODE REG.&VIN WRITING	1.CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
AYC/ACD	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Sensor Calibratio 3.Air bleeding 4.Test	
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information 2.Rain Sensor Error	
AUDIO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
HFM	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
OCM	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Zero Calibratio&Sys Check	
SATELLITE RADIO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Zero Calibratio&Sys Check	
SHIFT LEVER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
MITSUBISHI MONTERO						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
TPMS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Tire pressure sensor identification register(*) 2.Tire pressure sensor confirmation check(*) 3.Tire pressure sensor confirmation check(REQUIRES TOOL)(*)	
TCL/STABILITY	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SS4II	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
HBB	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MITSUBISHI OUTLANDER (CU)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI OUTLANDER (CW)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Temporary DTCs(*) 3.Learned value reset(*) 4.Ethanol forced learning mode	1. READINESS TEST 2. CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 1.Clear CVT oil level (*)	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Emission test mode(*) 3.All sensors calibration(*) 4.Forzen key	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	2.Head lamp Auto leveling Diag mode(*) 3.Service reminder(*)	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU information 2.Personalize(*) 3.Personalize Information(*) 4.personalize Reset(*) 5. Alarm record (optional)(*)	
SAS	<i>Info</i>	<i>err. code</i>			1.ECU Information 2.SAS calibration(*)	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Password change(*) 2. Key registration (bar code number)(*) 3. Key&KOS (Keyless Operation System) key registration (*)	
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			

AUDIO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
HFM	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
OCM	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Zero Calibratio&Sys Check	
SATELLITE RADIO	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information 2.Zero Calibratio&Sys Check	
MULTI SELECT 4WD	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	

AUSTRALIA

MITSUBISHI 380

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Temporary DTCs(*) 3.Reset adaptation(*)	1. READINESS TEST 2. CODING
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*)	1.CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
TCL/STABILITY CONTROL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
DISPLAY	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	

AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Learned Value Reset 3.Test	
MITSUBISHI CHALLENGER (k9)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MITSUBISHI CHALLENGER (kH)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Test 3.Temporary DTCs(*) 4.Initialize(*) 5..Write Injector ID(ECU Switched/Injector Switched) 6.Reading Injector ID	1.CODING
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Lateral G Sensor Calibration	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.personalize(*) 3.Personalize Information(*) 4.personalize Reset(*) 5.Short of key ID Registration(*) 6.Short or Key Access Check(*)	1.CODING

IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2. Key Registration 3.Reset Password 4.ENGINE KEY CODE REG.&VIN WRITING	1.CODING
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			
DISPLAY	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	

MITSUBISHI COLT

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Emissions Gas Mode(*) 3.SAS Calibration(*)	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3 Key&KOS (Keyless Operation System) key registration (*)	
4WS/EPS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI COLT CABRIOLET

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2. Temorary DTCs(*)	1.READINESS TEST 2.CODING
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Emissions Gas Mode(*) 3.SAS Calibration(*)	1.CODING

SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.SRS ECU Initialize	
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	1.CODING
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	1.CODING
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*)	
4WS/EPS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	1.CODING
DISPLAY	<i>Info</i>	<i>err. code</i>	<i>data</i>			
RHT/TOPSTACK	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Studying 2.Function Test	1.CODING

MITSUBISHI EXPRESS (PB)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*)	

MITSUBISHI EXPRESS / STAR WAGON (P0, P1)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
--------	-------------	------------------	-------------	----------------	--	--

MITSUBISHI GRANDIS

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Password change(*) 2. Key registration (bar code number)(*) 3. Key&KOS (Keyless Operation System) key registration (*)	
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI LANCER (CY)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Temporary DTCs(*) 2. Reset adaptation(*) 3. Ethanol Force learning mode 4. ECU Infromaton	1. READINESS TEST 2. CODING
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Emission test mode(*) 2. All sensors calibration(*) 3. ECU Information	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. ECU Information	
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. ECU Information	
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Head lamp Auto leveling Diag mode(*) 2. Service reminder(*) 3. ECU Information	

ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Alarm record (optional)(*) 5.ECU Information	
SAS	<i>Info</i>	<i>err. code</i>			1.SAS calibration(*) 2.ECU Information	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*) 4.ECU Information	1.CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AUDIO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
HFM	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Clear CVT oil level (*)	1.CODING
AFS/ACL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
MITSUBISHI LANCER EVOLUTION (CZ)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Temporary DTCs(*) 2.Reset adaptation(*) 3.Ethanol Force learning mode 4.ECU Infromaton	1. READINESS TEST 2. CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Clear CVT oil level (*)	1.CODING
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Emission test mode(*) 2.All sensors calibration(*) 3.ECU Information	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	

SHIFT LEVER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Head lamp Auto leveling Diag mode(*) 2.Service reminder(*) 3.ECU Information 4.Test	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Alarm record (optional)(*) 5.ECU Information	
SAS	<i>Info</i>	<i>err. code</i>			1.SAS calibration(*) 2.ECU Information	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*) 4.ECU Information	1.CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
AFS/ACL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AYC/ACD	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Sensor Calibration 3.Air bleeding 4.Test	
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AUDIO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
HFM	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	

MITSUBISHI LANCER SEDAN

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*)	
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AYC/ACD	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI LANCER SPORTBACK (CX)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Temporary DTCs(*) 2.Reset adaptation(*) 3.Ethanol Force learning mode 4.ECU Infromaton	1. READINESS TEST 2. CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	1.CODING
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Emission test mode(*) 2.All sensors calibration(*) 3.ECU Information 4.Frozen key	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SHIFT LEVER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	

METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Head lamp Auto leveling Diag mode(*) 2.Service reminder(*) 3.ECU Information	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Alarm record (optional)(*) 5.ECU Information	
SAS	<i>Info</i>	<i>err. code</i>			1.SAS calibration(*) 2.ECU Information	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*) 4.ECU Information	1.CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
AFS/ACL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AYC/ACD	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Sensor Calibration 3.Air bleeding 4.Test	
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AUDIO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
HFM	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
MITSUBISHI LANCER WAGON						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*)	
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI OUTLANDER (CU)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Password change(*) 2. Key registration (bar code number)(*) 3. Key&KOS (Keyless Operation System) key registration (*)	
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI OUTLANDER (CW)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Temporary DTCs(*) 2.Reset adaptation(*) 3.Ethanol Force learning mode 4.ECU Infromaton	1. READINESS TEST 2. CODING
--------	-------------	------------------	-------------	----------------	---	--------------------------------

AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Clear CVT oil level (*) 2.ECU Information	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Emission test mode(*) 2.All sensors calibration(*) 3.ECU Information 4.Frozen key	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Head lamp Auto leveling Diag mode(*) 2.Service reminder(*) 3.ECU Information 4.Test	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Alarm record (optional)(*) 5.ECU Information	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*) 4.ENGINE KEY CODE REG.&VIN WRITING 5.ECU Information	1.CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
AFS/ACL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			
MULTI SELECT 4WD	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AUDIO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	

SAS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.SAS calibration(*) 2.ECU Information	
HFM	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
MITSUBISHI PAJERO (V6,V7)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*)	
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
TCL/STABILITY CONTROL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SS4II	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MITSUBISHI PAJERO (V8,V9)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Temporary DTCs(*) 2.Learn valued Reset(*) 3.ECU Information 4.Initialize 5.Write Injector ID(Injector Switched/ECU Switched) 6.Read Injector ID	1. READINESS TEST 2. CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Learn value reset(*) 2.Test(INVECS-2 control stopped)(*) 3.ECU Information	

ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Service reminder(*) 2.ECU Information	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*) 4.ECU Information	
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
SS4II	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
DISPLAY	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	

MITSUBISHI TRITON (K6, K7)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*)	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI TRITON (KA, KB)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Temporary DTCs(*) 2.Learn valued Reset(*) 3.ECU Information 4.Initialize(*) 5.Write Injector ID(Injector Switched/ECU Switched) 6.Read Injector ID	1. CODING
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Keyless ID registration(*) 5.Keyless reception check(*) 6.ECU Information	1.CODING
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*) 4.ECU Information 5. ENGINE KEY CODE REG.&VIN WRITING	1.CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Learned value reset 2.Test 3.ECU Information	
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			
DISPLAY	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	

GENERAL

MITSUBISHI 380

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Temporary DTCs(*) 2.Learn valued Reset(*)	1. READINESS TEST 2. CODING
--------	-------------	------------------	-------------	----------------	--	--------------------------------

ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*) 4.ECU Information	1.CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
TCL/STABILITY CONTROL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
DISPLAY	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Learned Value Reset(*) 3.Test	
mitsubishi adventure						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
mitsubishi chariot						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*)	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MITSUBISHI COLT CABRIOLET						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Temporary DTCs(*)	1.READINESS TEST 2.CODING
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Emissions Gas Mode(*) 3.SAS Calibration(*) 4.YAW rate Sensor type reset	1.CODING
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.SRS ECU Initialize	
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	1.CODING
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Keyless ID registration(*) 5.Keyless reception check(*) 6.ECU Information	1.CODING
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
4WS/EPS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
DISPLAY	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
RHT/TOPSTACK	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Studying 2.Function Test	1.CODING
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI COLT / COLT PLUS

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Emissions Gas Mode(*) 3.SAS Calibration(*) 4.YAW rate Sensor type reset	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*)	
4WS/EPS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
POWER GATE	<i>Info</i>	<i>err. code</i>			1.ECU Information	

MITSUBISHI DELICA D:5

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Temporary DTCs(*) 2.Reset adaptation(*) 3.Ethanol Force learning mode 4.ECU Infromaton	1. READINESS TEST 2. CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Clear CVT oil level (*) 2.ECU Information	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Emission test mode(*) 2.All sensors calibration(*) 3.ECU Information 4.Frozen key	

SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Infromation	
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Infromation	
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Head lamp Auto leveing Diag mode(*) 3.Service reminder(*)	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Keyless ID registration(*) 5.Keyless reception check(*) 6.ECU Information	
SAS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.SAS calibration(*) 2.ECU Information	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*) 4.ENGINE KEY CODE REG.&VIN WRITING 5.ECU Information	1.CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Infromation	
AFS/ACL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Infromation	
POWER GATE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Infromation	
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			
ELECTRIC SLIDE DOOR R	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Infromation	
ELECTRIC SLIDE DOOR L	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Infromation	

MITSUBISHI DELICA PICK UP

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MITSUBISHI DION						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*) 4.ENGINE KEY CODE REG.&VIN WRITING 5.ECU Information	1.CODING
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MITSUBISHI ECLIPSE						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Learned Value Reset(*) 3.Temporary DTC(*)	1. READINESS TEST 2. CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Learn Value Reset(*) 3.Test	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Sensor Calibration(*)	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	

SAS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Key registration (bar code number)(*) 2.Key&KOS (Keyless Operation System) key registration (*) 3.ENGINE KEY CODE REG.&VIN WRITING 4.ECU Information	1.CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	

MITSUBISHI EXPRESS (PB)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI GALANT (DJ)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Temporary DTCs(*) 2.Learned value reset(*) 3.ECU Information	1. READINESS TEST 2. CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Test 2.Learned value reset 3.ECU Information	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
ETACS	<i>Info</i>	<i>err. code</i>			1.ECU Information	

IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*) 4.ECU Information 5.ENGINE KEY CODE REG.&VIN WRITING	1.CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
TCL/STABILITY CONTROL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
MITSUBISHI GALANT (DL)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Temporary DTCs(*) 2.Learn value Reset(*) 3.ECU Infromaton	1. READINESS TEST 2. CODING
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*) 4.ECU Information 5.ENGINE KEY CODE REG.&VIN WRITING	
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
TCL/STABILITY CONTROL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	

DISPLAY	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Test 2.Learned value reset(*) 3.ECU Information	
MITSUBISHI GALANT (EA)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3 Key&KOS (Keyless Operation System) key registration (*)	
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
TCL/STABILITY CONTROL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
MITSUBISHI GRANDIS						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*)	
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
KEYLESS OPERATION	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
SAS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
DISPLAY	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
POWER GATE	<i>Info</i>	<i>err. code</i>				
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Learn value Reset(*) 2.ECU Information	1.READINESS TEST
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Learn value Reset(*) 2.ECU Information	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Emission test mode(*) 2.All sensors calibration(*)	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Service reminder(*)	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Keyless ID registration(*) 5.Keyless reception check(*) 6.ECU Information	1.CODING
4WS/EPS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	

LIN	Info	err. code	data			
KEYLESS OPERATION	Info	err. code	data	Actuat.	1.ECU Information 2.Keyless Operation System,Key registration(*) 3.Steer locked Unit registration 4.Communications Test 5.KOS Personalization Infromation	

MITSUBISHI L200

ENGINE	Info	err. code	data	Actuat.		
ABS	Info	err. code	data	Actuat.		
SRS	Info	err. code	data	Actuat.		
ETACS	Info	err. code	data	Actuat.		
IMMO	Info	err. code	data	Actuat.	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*)	

MITSUBISHI L300 / DELICA WAGON

ENGINE	Info	err. code	data	Actuat.		
--------	------	-----------	------	---------	--	--

MITSUBISHI LANCER (CK)

ENGINE	Info	err. code	data	Actuat.		
ABS	Info	err. code	data	Actuat.		
SWS	Info	err. code	data	Actuat.		
SRS	Info	err. code	data	Actuat.		
AT	Info	err. code	data	Actuat.		

MITSUBISHI LANCER (CS, CT)

ENGINE	Info	err. code	data	Actuat.		
SWS	Info	err. code	data	Actuat.		

ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*)	
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AYC/ACD	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
MITSUBISHI LANCER / LANCER EX (CY)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Temporary DTCs(*) 2.Learn value reset(*) 3.Ethanol Force learning mode 4.ECU Infromaton	1. CODING
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Emission test mode(*) 2.All sensors calibration(*) 3.ECU Information	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Head lamp Auto leveling Diag mode(*) 2.Service reminder(*) 3.ECU Information	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Alarm record (optional)(*) 5.ECU Information	

SAS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.SAS calibration(*) 2.ECU Information	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*)	
4WS/EPS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AFS/ACL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AUDIO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Learn Value Reset 3.Test 4.Clear CTV oil level(*)	
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
HFM	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
MITSUBISHI LANCER EVOLUTION (CZ)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Temporary DTCs(*) 2. Learn value reset(*) 3.Ethanol Force learning mode 4.ECU Infromaton	1.READINESS TEST 2.CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Emissions Gas Mode(*) 3.Sensor Calibration(*)	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	

METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Head lamp Auto leveling Diag mode(*) 2.Service reminder(*) 3.ECU Information	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information 2.personalization(*) 3.personalization Information(*) 4.personalization reset(*) 5.Alarm record(*)	
SAS	<i>Info</i>	<i>err. code</i>			1.ECU Infomation 2.SAS calibration(*)	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*)	1. CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AFS/ACL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AYC/ACD	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Sensor Calibration(*) 3.Air bleeding 4.Test	
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AUDIO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
HFM	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
OCM	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Zero Calibration&Sys Check	
SHIFT LEVER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	

MITSUBISHI LANCER SPORTBACK (CX)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Temporary DTCs(*) 2. Learn value reset(*) 3. Ethanol Force learning mode 4. ECU Information	1. READINESS TEST 2. CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. ECU Information 2. Clear CTV oil level(*)	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. ECU Information 2. Emissions Gas Mode(*) 3. SAS Calibration(*) 4. Frozen key	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. ECU Information	
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. ECU Information	
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Head lamp Auto leveling Diag mode(*) 2. Service reminder(*) 3. ECU Information	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1. ECU Information 2. personalization(*) 3. personalization Information(*) 4. personalization reset(*) 5. Alarm record(*)	
SAS	<i>Info</i>	<i>err. code</i>			1. ECU Information 2. SAS calibration(*)	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Key registration (bar code number)(*) 2. Key&KOS (Keyless Operation System) key registration (*) 3. ENGINE KEY CODE REG.&VIN WRITING 4. ECU Information	1. CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>		1. ECU Information	
AFS/ACL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. ECU Information	

AYC/ACD	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Sensor Calibration(*) 3.Air bleeding 4.Test	
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AUDIO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
HFM	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SHIFT LEVER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	

MITSUBISHI LANCER WAGON

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Key registration (bar code number)(*) 2 Key&KOS (Keyless Operation System) key registration (*) 3.ENGINE KEY CODE REG.&VIN WRITING 4.ECU Information	
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI MAVEN

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
--------	-------------	------------------	-------------	----------------	--	--

MITSUBISHI OUTLANDER (CU)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
--------	-------------	------------------	-------------	----------------	--	--

ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*)	
MITSUBISHI OUTLANDER (CW) / OUTLANDER EX (CW)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Temporary DTCs(*) 2.Learn value reset(*) 3.Ethanol Force learning mode 4.ECU Infromaton	1. READINESS TEST 2. CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Clear CVT oil level (*) 2.ECU Information	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Emission test mode(*) 2.All sensors calibration(*) 3.ECU Information 4.Frozen key	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Head lamp Auto leveling Diag mode(*) 2. Service reminder(*) 3.ECU Information 4.Test	

ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Alarm record (optional)(*) 5.ECU Information	
SAS	<i>Info</i>	<i>err. code</i>			1.SAS calibration(*) 2.ECU Information	
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*)	1.CODING
AND	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			
MULTI SELECT 4WD	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AUDIO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
MITSUBISHI PAGERO / MONTERO (V6, V7)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
TCL/STABILITY CONTROL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SS4II	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

HBB	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*)	
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
MITSUBISHI PAJERO / MONTERO (V8, V9)						
ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Temporary DTCs(*) 2.Learn valued Reset(*) 3.ECU Information 4.Initialize 5.Write Injector ID(Injector Switched/ECU Switched) 6.Read Injector ID	1. READINESS TEST 2. CODING
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Learn value test 2.Test 3.ECU Information	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
METER	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Service reminder	
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Password change(*) 2. Key registration 3.ECU Information 4. ENGINE KEY CODE REG.&VIN WRITING	1.CODING
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			

SS4II	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
HBB	<i>Info</i>	<i>err. code</i>		<i>Actuat.</i>		
DISPLAY	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			
CAN/LIN/SWS CONVERTER	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information 2.personalization(*) 3.personalization Information(*)	

MITSUBISHI PAJERO IO

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SWS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

MITSUBISHI PAGERO SPORT / MONTERO SPORT (K8, K9)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AUTO CRUISE	<i>Info</i>	<i>err. code</i>	<i>data</i>			
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Password change(*) 2.Key registration (bar code number)(*) 3.Key&KOS (Keyless Operation System) key registration (*)	

MITSUBISHI TRITON / L2 (KA, KB) / STRADA (KA, KB)

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization(Supply pump exchange service)(*) 2.Test(Fuel system leak detection) 3.Learning(Micro injection adaptation) 4.Injector ID(injector Switched/ECU Switched) 5.Read injector ID 6.ECU Information	1.READINESS TEST 2.CODING
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Keyless ID registration(*) 5.Keyless reception check(*) 6.ECU Information	1.CODING
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Emission test mode(*) 2. All sensors calibration(*) 3.ECU Information	
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information 2.Learn Value Reset 3.Test	
DISPLAY	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.ECU Information	
LIN	<i>Info</i>	<i>err. code</i>	<i>data</i>			
IMMO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1. Password change(*) 2. Key registration (bar code number)(*) 3. key registration (Use Key) 4.ENGINE KEY CODE REG.&VIN WRITING 5.ECU Information	1.CODING
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	

MITSUBISHI ZINGER \ FUZION

ENGINE	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization(Supply pump exchange service)(*) 2.Test(Fuel system leak detection) 3.Learning(Micro injection adaptation) 4.Injector ID(injector Switched/ECU Switched) 5.Read injector ID 6.ECU Information 7.Temporary DTC(*)	1. READINESS TEST 2. CODING
ETACS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.personalization(*) 2.Personalization information(*) 3.Reset personalization(*) 4.Keyless ID registration(*) 5.Keyless reception check(*) 6.ECU Information	1.CODING
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
AT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ECU Information	
AC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		