

System	ECU type	System Info.	Read-clear Dtc.	Data stream	Actuation	Special Function
PEUGEOT 106						
Additional heating		<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
PEUGEOT 106REMOD ELAGE						
Petrol engine	CDY BOSCH MA3.1	<i>Info</i>	<i>err. code</i>			
	CDZ BOSCH MA3.1	<i>Info</i>	<i>err. code</i>			
	HDY BOSCH MA3.1	<i>Info</i>	<i>err. code</i>			
	HDZ BOSCH MA3.1	<i>Info</i>	<i>err. code</i>			
	HFX BOSCH M7.4.4	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	KFX BOSCH MP7.3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
	KFX MM1AP	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	KFW SAGEM S2000	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.Initialization Adapation
	NFX MM1AP	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
Additional heating		<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
PEUGEOT 107						
AT	controlled manual gearbox(MMT)			<i>data</i>		
	Power steering	<i>Info</i>	<i>err. code</i>	<i>data</i>		
PEUGEOT 1007 CAN						
Petrol engine	KFU MM6LPC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	KFV J34P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	NFU BOSCH ME7.4.5	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
Diesel engine	8HX SID 806 DV4	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	8HZ SID 806 DV4	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	9HT BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HZ BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
ABS	ABS MK70.1	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	ESP MK60-O	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Airbag ECU	Airbag ECU	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Vehicle protection/Managem	Alarm	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Rain/brightness sensor	<i>Info</i>	<i>err. code</i>			
	Parking assistance	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration

Driving assistance/Comfort	Air conditioning	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Under inflation	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Power steering	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Configuration
Inform the driver/Audio/Communication	Multi-function display	<i>Info</i>		<i>data</i>		
	Steering wheel switching module	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Radio	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Hands Free Kit	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	CD player	<i>Info</i>	<i>err. code</i>		<i>Actuat.</i>	
	Instrument panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Telematics	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration

PEUGEOT 1007 VAN

Petrol engine	NFU ME744	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	KFV J34P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	KFV S2000PM2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	KFU MM6LP	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	N6A BOSCH ME7.4.5	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	N6B BOSCH ME7.4.5	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	NFU BOSCH ME7.4.5	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Diesel engine	8HZ SIEMENS SID 804	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>
8HX SIEMENS SID804		<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	2.Configuration
ABS	ABS MK70	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	ESP MK60	<i>Info</i>	<i>err. code</i>	<i>data</i>		
A/T	Controlled manual gearbox(BVMP)	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Air bag	Airbag ECU	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Visibility/Lighting/Signalling	Rain/brightness sensor	<i>Info</i>	<i>err. code</i>			
	Steering wheel switching module	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Driving assistance/Comfort	Parking assistance	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Air conditioning	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Power steering	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Inform the driver/Audio/Communication	Telematics RT3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Multi -function display EMF	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	CD player	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Instrument panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Radio	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration

PEUGEOT 206

Petrol engine	NFU BOSCH ME744	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.Initialization Adapation
	RFR MM48P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
	N6A BOSCH ME745	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.Initialization Adapation 3.Program design/Mtich
	NFU BOSCH ME745	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.Initialization Adapation 3.Program design/Mtich
	N6A BOSCH ME744 FLEX FUEL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	N6A BOSCH ME744	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.Initialization Adapation
	RFN MM48P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	KFX BOSCH MP7.3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
	KFX MM1AP	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	KFU MM6LP	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Initialization Adapation
	HFZ MM1AP	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation 2.Injection ECU initialisation
	HFY MM1AP	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation 2.Injection ECU initialisation
	KFW SAGEM S2000	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.Initialization Adapation

	K6D SAGEM S2000	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.Initialization Adapation
	K6C MM1AP	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation 2.Injection ECU initialisation
	HFX MM4.8P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	RFK MM6LP	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	RFN MM6LP	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Initialization Adapation
	7LZ MM5NP	<i>Info</i>	<i>err. code</i>			
	KFW BOSCH ME7.4.4	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	NFZ BOSCH MP7.2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	KFW J34P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	K6D J34P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	NFU J35	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
Diesel engine	WJY LUCAS DCN2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	WJZ LUCAS DCN2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	8HX BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HZ BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHY BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	8HX/8HZ BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
ABS	ABS MK70	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.air bleed
	ESP MK60	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Anti-lock brakes TEVES (ABS BOSCH 5.3)	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.air bleed
A/T	AL4 automatic gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.Initialization Adapation 3.Accelebration pedal 4.Oil wear counter
	ZF 4HP20 AT	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Diesel fuel additive control unit	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration

	Electric pump unit(power steering)	<i>Info</i>	<i>err. code</i>	<i>data</i>		
IP	Instrument panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching
	BSI	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation 2.key program
A/C	Air conditioning	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Alarm	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
Visibility/Lighting	Driving school	<i>Info</i>		<i>data</i>	<i>Actuat.</i>	
	Rain/brightness sensor	<i>Info</i>	<i>err. code</i>			
Driver information	Display/Telematics	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching
	on-board navigation	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Instrument panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Radio	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	CD Player	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Switch unit under steering	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Air bag	SAC-CENT-AUTOLIV-2	<i>Info</i>	<i>err. code</i>			1.Marching 2.lock and unlock
Air bag	Air bag and seat belt	<i>Info</i>	<i>err. code</i>			1.Marching
Left Air bag	Left side airbag	<i>Info</i>	<i>err. code</i>			1.Marching
Right Air bag	Right side airbag	<i>Info</i>	<i>err. code</i>			1.Marching

PEUGEOT 206 MUX

	HFX MM48P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	HFY MM1AP	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation 2.Injection ECU initialisation
	HFZ MM1AP	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation 2.Injection ECU initialisation
	K6C MM1AP	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation 2.Injection ECU initialisation
	K6D SAGEM S2000	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	KFU MM6LP	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	KFW BOSCH ME7.4.4	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation

Petrol engine	KFW J34P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	KFW SAGEM S2000	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	KFX BOSCH MP7.3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
	KFX MM1AP	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	N6A BOSCH ME7.4.4	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	N6A BOSCH ME7.4.4FLEX FUEL	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	N6A BOSCH ME7.4.5	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	NFU BOSCH ME7.4.4	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	NFU BOSCH ME7.4.5	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	NFU J35	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	K6D J34P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	NFZ BOSCH MP7.2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	RFK MM6LP	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	RFN MM6LP	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RFN MM48P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
RFR MM48P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation	
Diesel engine	8HX/8HZ BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	8HZ BOSCH EDC16C3 EURO4	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HY BOSCH EDC16C3 EURO4	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HT BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HY BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HZ BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHY BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	WJY LUCAS DCN2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
Diesel fuel additive control unit	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration	
AT	AL4 automatic gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
ABS	ABS MK70	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Anti-lock brakes MK70	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Anti-lock brakes TEVES	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	ESP MK60	<i>Info</i>	<i>err. code</i>	<i>data</i>		

Air bags	Air bags	<i>Info</i>	<i>err. code</i>	<i>data</i>		
A/C	Air conditioning	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Alarm	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
Visibility/Lighting	Driving school	<i>Info</i>		<i>data</i>	<i>Actuat.</i>	
	Rain/brightness sensor	<i>Info</i>	<i>err. code</i>			
Driver information/Communication	Display/Telematics/AM F	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Display/Telematics/RT3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Radio	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	CD player	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Instrument panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Electric pump unit(power steering)	<i>Info</i>	<i>err. code</i>	<i>data</i>		

PEUGEOT 206 +

Petrol engine	KFW J34P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
AT	AL4 automatic gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Active safety	Anti -lock brakes MK70	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	ABS MK70	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	ESP MK60	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Air-bag	<i>Info</i>	<i>err. code</i>	<i>data</i>		
A/C	Air conditioning	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Alarm	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Rain/brightness sensor	<i>Info</i>	<i>err. code</i>			
Inform the driver/Audio/Communication	Display/Telematics	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Steering wheel switching module	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Radio	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	CD player	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Instrument panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration

PEUGEOT 207 CAN

Petrol engine	N6A BOSCH ME7.4.5	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Programming
	N6B BOSCH ME7.4.5	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	NFU BOSCH ME7.4.5	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	KFU MM6LPC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adaption
	5FW MEV17.4	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	5FX MED17.4	<i>Info</i>	<i>err. code</i>	<i>data</i>		

Petrol engine	5FY MED17.4	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	8FS MEV17.4	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	MEV17.4 EVO	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	KFV J34P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
Diesel engine	8HZ BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HX BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HZ BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HV BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	9HY BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HT BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	8HZ BOSCH EDC16C3 EURO4	<i>Info</i>	<i>err. code</i>			
	9HY BOSCH EDC16C3 EUR04 (CAN)	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Multiplexed additive adding pump ECU	<i>Info</i>	<i>err. code</i>			
AT ECU	AL4 automatic gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	colltrolled manual gearbox(BVMP)	<i>Info</i>	<i>err. code</i>	<i>data</i>		
ABS	ABS MK70.1	<i>Info</i>	<i>err. code</i>			
	ESP MK60-O	<i>Info</i>	<i>err. code</i>			
	Built -in systems interface(BSI)	<i>Info</i>	<i>err. code</i>			
Air bag	Airbag ECU	<i>Info</i>	<i>err. code</i>			
Driving assistance/Comfort	Parking assistance	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Air conditioning	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Under inflation detection	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Power steering	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Muti-function display	<i>Info</i>	<i>err. code</i>			
	Radio	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	CD player	<i>Info</i>	<i>err. code</i>		<i>Actuat.</i>	
	Instrument panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Hands Free Kit	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Steering wheel switching module	<i>Info</i>	<i>err. code</i>			

Inform the driver/Audio/Communication	Telamatics	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Warning light showing seat belt not fastened	<i>Info</i>				
Vehicle protection/Management of accesses	Alarm	<i>Info</i>	<i>err. code</i>			
Visibility/Lighting/Signalling	Rain/Brightness sensor	<i>Info</i>	<i>err. code</i>			
	Driving school module	<i>Info</i>	<i>err. code</i>		<i>Actuat.</i>	
	Static AFS	<i>Info</i>	<i>err. code</i>			

PEUGEOT 207 VAN

Petrol engine	KFW J34P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
Diesel engine	8HZ BOSCH EDC16C3 EURO4	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HY BOSCH EDC16C3 EUR04	<i>Info</i>	<i>err. code</i>	<i>data</i>		
AT	AL4 automatic gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
A/C	Air conditioning	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
Inform the driver/Audio/Communication	Display/Telematics/AMF	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Display/Telematics/RT3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Steering wheel switching module	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Radio	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	CD player	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Instrument panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Alarm	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
Active and passive safety	ABS MK70	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	ESP MK60	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Air bags	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Rain/brightness sensor	<i>Info</i>	<i>err. code</i>			

PEUGEOT 3008

Diesel engine	5FX MED17.4	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HZ EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	DCM3.5	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Filter
	CFC300P gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		

AT ECU	AM6 Euro5 automatic gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	AT6 Euro5 automatic gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Vehicle protection/Management of	Alarm	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Driver's door control panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
Inform the driver/Audio/Communication	Multifunction display (EMF)	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Steering wheel switching module	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Radio	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Instrument panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	CD player	<i>Info</i>	<i>err. code</i>		<i>Actuat.</i>	
Driving assistance/Comfort	Telematics	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Air conditioning	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Parking assistance	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
Visibility/Lighting/Signalling	Under inflation	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Rain sensor	<i>Info</i>	<i>err. code</i>			

PEUGEOT 306

Petrol engine	HDY BOSCH MA3.1	<i>Info</i>	<i>err. code</i>			
	KFX MM1AP	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	HDZ BOSCH MA3.1	<i>Info</i>	<i>err. code</i>			
	RFS MM1AP	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Air bag	Air bag and seat belt	<i>Info</i>	<i>err. code</i>			1.Marching

PEUGEOT 306REMOD ELAGE

Petrol engine	KFX BOSCH MP7.3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adaption
	NFZ BOSCH MP7.2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	KFX MM1AP	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	KFX SAGEM SL96	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adaption
	LFY BOSCH MP7.3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adaption
	LFY SAGEM SL96	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adaption
	NFT BOSCH M7.4.4	<i>Info</i>	<i>err. code</i>	<i>data</i>		
KFW SAGEM S2000	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.Initialization Adaption	

	K6D SAGEM S2000	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.Initialization Adapation
	NFV BOSCH M7.4.4	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RFS MM1AP	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Diesel engine	WJY LUCAS DCN2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	WJZ LUCAS DCN2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHY BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
ABS	ABS BOSCH 5.3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
A/T	AL4 Gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.Initialization Adapation 3.Accelebration pedal 4.Oil wear counter
Air bag	Air bag and seat belt	<i>Info</i>	<i>err. code</i>			1.Marching
Left Air bag	Left side airbag	<i>Info</i>	<i>err. code</i>			1.Marching
Right Air bag	Right side airbag	<i>Info</i>	<i>err. code</i>			1.Marching

PEUGEOT 307 VAN

Petrol engine	NFU BOSCH ME744	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.Initialization Adapation
	KFW SAGEM S2000	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.Initialization Adapation
	K6D SAGEM S2000	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.Initialization Adapation
	N6A BOSCH ME7.4.4	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.Initialization Adapation
	N6A BOSCH ME7.4.5	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	NFU BOSCH ME7.4.5	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	RFN MM48P(Mechanical throttle housing)	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	RFN MM4MP2(Motorised butterfly)	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	KFU MM6LP	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Initialization Adapation

	RFK MM6LP	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Initialization Adapation
	RFN MM6LP	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Initialization Adapation
Diesel engine	RHZ BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHS BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Service
	9HY BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHY SIEMENS SID 801	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHY BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HZ BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HT BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	8HZ BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	9HX BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HY BOSCH EDC16C3 EUR04	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHR SIEMENS SID 803	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
RHL SIEMENS SID 803	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration	
ABS	TEVES MK60 ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	ABS BOSCH 8	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	ESP BOSCH 5.7	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	ABS BOSCH 5.3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	ESP BOSCH 8	<i>Info</i>	<i>err. code</i>	<i>data</i>		
A/T	BVA AL4	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marchting 2 Oil wear
	ZF 4HP20 AT	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Air bag	SAC CENTRAL	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	SAC CENT SIEMENS	<i>Info</i>	<i>err. code</i>			1.Marchting
Driver information	Display/Telematics/AM F	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Display/Telematics/RT3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	parking assistance	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Radio	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration

	CD player	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Switch unit under steering wheel(COM 2000)	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Instrument panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
Visibility/Lighting	Driving school	<i>Info</i>		<i>data</i>	<i>Actuat.</i>	
switch control	Driver's door module	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Passenger door module	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Diesel fuel additive control unit	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching
	Electric pump unit(power steering)	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Alarm	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	BSI	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.key program
A/C	Air conditioning	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
PEUGEOT 307 CAN						
Petrol engine	N6A BOSCH ME745	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Programming
	NFU BOSCH ME745	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Programming
	RFN MM6LP	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	N6B BOSCH_ME745	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	KFU MM6LP	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RFK MM6LP	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	RFJ MM6LPB	<i>Info</i>	<i>err. code</i>			
	KFU MM6LPC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adaption
	NFU_Or_N6A_Or_N6B_ME	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	NFU_Or_N6A_ME749_FLE X_FUEL	<i>Info</i>	<i>err. code</i>			
	RFJ MM6KP BIO Flex(EW10A FF)	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHY_BOSCH_EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHZ_BOSCH_EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HV_BOSCH_EDC16C3	<i>Info</i>	<i>err. code</i>		<i>Actuat.</i>	1.Configuration

Diesel engine	9HX_BOSCH_EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HY_BOSCH_EDC16C3_EU RO	<i>Info</i>	<i>err. code</i>			
	9HY_BOSCH_EDC16C3_EU	<i>Info</i>	<i>err. code</i>			
	9HZ_BOSCH_EDC16C3	<i>Info</i>	<i>err. code</i>			1.Configuration
	RHR_SIEMENS_SID_803	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHL_SIEMENS_SID_803	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHL DCM3.4	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHR DCM3.4	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HT BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
AT ECU	AM6L4 automatic gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	AL4 automatic gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	BSI	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.keys of
Active and passive safety	ABS8 BOSCH	<i>Info</i>	<i>err. code</i>			
	ESP8 BOSCH	<i>Info</i>	<i>err. code</i>			
	Airbag ECU	<i>Info</i>	<i>err. code</i>			
Driving assistance/Comfort	Parking assistance	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Air conditioning	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Power steering	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Under inflation detection	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Inform the driver/Audio/Communication	Muti-function display	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Radio	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	CD player	<i>Info</i>	<i>err. code</i>		<i>Actuat.</i>	
	Hands Free Kit	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Instrument panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Steering wheel switching module	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Telamatics	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
Vehicle protection/Management of accesses	Alarm	<i>Info</i>	<i>err. code</i>			
	Driver's door module	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Passenger door module	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Retractable roof	<i>Info</i>	<i>err. code</i>			
	Sun roof	<i>Info</i>	<i>err. code</i>			

Visibility/Lighting/Signalling	Rain/Brightness sensor	<i>Info</i>	<i>err. code</i>			
	Right headlamp beam corrector	<i>Info</i>	<i>err. code</i>			
	Left headlamp beam level corrector	<i>Info</i>	<i>err. code</i>			
	Driving school module	<i>Info</i>	<i>err. code</i>		<i>Actuat.</i>	
	Steering wheel switching module	<i>Info</i>	<i>err. code</i>	<i>data</i>		
PEUGEOT 308						
	BSI	<i>Info</i>	<i>err. code</i>			
Petrol engine	5FT MED17.4	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	5FW MEV17.4	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	5FX MED17.4	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	5FY MED17.4	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	8FS MEV17.4	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	N6A ME745	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	N6B ME745	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	NFU ME745	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	NFU ME749 Bio Flex	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RFJ MM6KP Bio Flex(EW10A FF)	<i>Info</i>	<i>err. code</i>			
RFJ MM6LPB	<i>Info</i>	<i>err. code</i>				
Diesel engine	9HV EDC16C3	<i>Info</i>	<i>err. code</i>		<i>Actuat.</i>	1.Configuration
	9HX EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HY EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HZ EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHL DCM3.4	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHR DCM3.4	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHF DCM3.4	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.particle emission filter
	CFC300P gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		

A/T	AM6C gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	AL4 gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	AM6 Euro5 automatic gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	AT6 Euro5 automatic gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Multiplexed additive adding pump	<i>Info</i>	<i>err. code</i>			
Vehicle protection / Management of	Alarm	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Driver's door module	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
Air bag	Air-bag	<i>Info</i>	<i>err. code</i>			
Driving assistance/comfort	Lane departure warning	<i>Info</i>	<i>err. code</i>			
	Air conditioning	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Electropump assembly	<i>Info</i>	<i>err. code</i>			
	Drivers seat memory unit	<i>Info</i>	<i>err. code</i>			
	Parking assistance	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Under inflation detection	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Inform the driver/Audio/Communication	Multifunction screen	<i>Info</i>	<i>err. code</i>			
	Radio	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Instrument panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Hands Free Kit	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Not Fastened warning light(TNB)	<i>Info</i>				
	Telematics	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Steering wheel switching module	<i>Info</i>	<i>err. code</i>			
	CD player	<i>Info</i>	<i>err. code</i>		<i>Actuat.</i>	
	Audio amplifier	<i>Info</i>	<i>err. code</i>			
	Services Module	<i>Info</i>	<i>err. code</i>			
Visibility/Lighting/Signalling	Rain sensor	<i>Info</i>	<i>err. code</i>			
	Discharge bulb with directional dipped headlamp	<i>Info</i>	<i>err. code</i>			
	Driving school module	<i>Info</i>	<i>err. code</i>		<i>Actuat.</i>	
PEUGEOT 405						
	N6A ME7.4.4	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	N6B ME7.4.4	<i>Info</i>	<i>err. code</i>	<i>data</i>		

Petrol engine	NFU ME7.4.4	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	LFY BOSCH MP7.3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	L6A SAGEM SL96	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	1600RD SL96	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	LFZ SAGEM S2000	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
	NFU J35	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration

PEUGEOT 406

Petrol engine	KFX SAGEM SL96	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
	LFY BOSCH MP7.3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
	LFY BOSCH MP5.2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	LFX MM1AP	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation 2.Ignition advance setting
	LFY SAGEM SL96	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
Diesel engine	RHZ BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
ABS	ABS BOSCH 5.3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
A/T	AL4 autoadaptive automatic gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Air bag	Air bag and seat belt	<i>Info</i>	<i>err. code</i>			1.Marchting
Left Air bag	Left side airbag	<i>Info</i>	<i>err. code</i>			1.Marchting
Right Air bag	Right side airbag	<i>Info</i>	<i>err. code</i>			1.Marchting

PEUGEOT 406R

Petrol engine	XFX BOSCH ME 746	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	LFY BOSCH MP5.2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	LFX MM1AP	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation 2.Ignition advance setting
	LFY SAGEM SL96	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
	LFY BOSCH MP7.3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
	3FZ MM4MP2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	

	RFN MM48P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	R6F MM48P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
	RFR MM48P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
	6FZ SAGEM S2000	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	RLZ SIEMENS IRIUS81	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Diesel engine	RHY BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	4HX BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHY SIEMENS SID 801	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHS BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	RHZ BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Diesel fuel additive control unit	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
ABS	ESP BOSCH 5.3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	ABS BOSCH 5.3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Alarm	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	BSI	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.keys of
	Rain/brightness sensor	<i>Info</i>	<i>err. code</i>			
A/C	Air conditioning	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
Driver information	Multi -function display	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Radio	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	CD player	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	On-board navigation system	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Switch unit under steering wheel(COM 2000)	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Instrument panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
A/T	AL4 autoadaptive automatic gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Air bag	SAC-CENT-AUTOLIV-2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Air bag	Air bag and seat belt	<i>Info</i>	<i>err. code</i>			1.Marchting
Left Air bag	Left side airbag	<i>Info</i>	<i>err. code</i>			1.Marchting
Right Air bag	Right side airbag	<i>Info</i>	<i>err. code</i>			1.Marchting

PEUGEOT 406R COUPE

Petrol engine	XFX BOSCH ME 746	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	LFY BOSCH MP5.2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	LFX MM1AP	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation 2.Ignition
	LFY SAGEM SL96	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
	LFY BOSCH MP7.3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
	3FZ MM4MP2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	RFN MM48P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	R6F MM48P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
	RFR MM48P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
	6FZ SAGEM S2000	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
RLZ SIEMENS IRIUS81	<i>Info</i>	<i>err. code</i>	<i>data</i>			
Diesel engine	RHY BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	4HX BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHY SIEMENS SID 801	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHS BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Service
	RHZ BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Diesel fuel additive control unit	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
ABS	ESP BOSCH 5.3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	ABS BOSCH 5.3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Alarm	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	BSI	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.key program
	Rain/brightness sensor	<i>Info</i>	<i>err. code</i>			
A/C	Air conditioning	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
Driver information	Multi -function display	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Radio	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	CD player	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	On-board navigation system	<i>Info</i>	<i>err. code</i>	<i>data</i>		

	Switch unit under steering wheel(COM 2000)	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Instrument panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
A/T	AL4 autoadaptive automatic gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Air bag	SAC-CENT-AUTOLIV-2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Air bag	Air bag and seat belt	<i>Info</i>	<i>err. code</i>			1.Marchting
Left Air bag	Left side airbag	<i>Info</i>	<i>err. code</i>			1.Marchting
Right Air bag	Right side airbag	<i>Info</i>	<i>err. code</i>			1.Marchting
PEUGEOT 406 COUPE						
Air bag	Air bag and seat belt	<i>Info</i>	<i>err. code</i>			1.Marchting
Left Air bag	Left side airbag	<i>Info</i>	<i>err. code</i>			1.Marchting
Right Air bag	Right side airbag	<i>Info</i>	<i>err. code</i>			1.Marchting
A/T	AL4 autoadaptive automatic Gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
ABS	BOSCH ABS5.3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
PEUGEOT 407						
Diesel engine	RHR SIEMENS SID803	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	RHL DCM3.4	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHR DCM3.4	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHF DCM3.4	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.particle emission filter
	4HP BOSCH EDC16CP39	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Filter
	4HR BOSCH EDC16CP39	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Filter
	4HS BOSCH EDC16CP39	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Filter
	4HT BOSCH EDC16CP39	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Filter
	9HT BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HY BOSCH EDC16C3 EUR03	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	9HZ BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHL SIEMENS SID 803	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
Petrol engine	3FZ MM6LP	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	3FY MM6LPB	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	6FY MM6LPB	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	6FZ S2000PM2	<i>Info</i>	<i>err. code</i>	<i>data</i>		

	RFN MM6LP	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RFJ MM6KP BIO Flex(EW10A FF)	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Diesel fuel additive control unit	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
ABS	ESP8.1	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	ESP EBC 440(KWP)	<i>Info</i>	<i>err. code</i>	<i>data</i>		
A/T	AL4 automatic gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.Oil wear counter
	4HP20 automatic	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	AM6 automatic	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	AM6 Euro5 automatic gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Built -in systems interface(BSI)	<i>Info</i>	<i>err. code</i>			
Air bag	Airbag ECU	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Inform the driver Audio/Communication	Muti-function display	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Radio	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	CD player	<i>Info</i>	<i>err. code</i>		<i>Actuat.</i>	
	Instrument panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Telematics	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Hands Free Kit	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
Vehicle protection Management of accesses	Alarm	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Driver's door module	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Passenger door module	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
Visibility Lighting/Signalling	Control unit windscreen wipers	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Rain/Brightness sensor	<i>Info</i>	<i>err. code</i>			
	Steering wheel switching module	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
Driving assistance/Comfort	Parking assistance	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Air conditioning	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Additional heating	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Power steering	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Under inflation detection	<i>Info</i>	<i>err. code</i>	<i>data</i>		
PEUGEOT 607 VAN						
	3FZ MM4MP2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	

Petrol engine	RFN MM48P(Mechanical throttle housing)	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	RFN MM4MP2(Motorised butterfly)	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	R6F MM4.8P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
	XFX BOSCH ME7.4.6	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Diesel engine	RHS BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Service
	4HX BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHZ BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
ABS	ESP BOSCH 5.3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	ABS BOSCH 5.3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
A/T	BVA ZF	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	4HP20 gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Air bag	Air bag	<i>Info</i>	<i>err. code</i>			
Driver information	Multi -function display	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Parking assistance	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Instrument panel	<i>Info</i>	<i>err. code</i>		<i>Actuat.</i>	1.Configuration
	CD player	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Radio	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
switch control	Driver's door control	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Passenger's door control panel	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Visibility/Lighting	Headlamp height corrector	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	BSI	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
	storing of the driving position	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Diesel fuel additive control unit	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marchting
A/C	Air conditioning	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
PEUGEOT 607 CAN						
Petrol engine	3FZ MM6LP	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	3FY MM6LPB	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	XFV ME747	<i>Info</i>	<i>err. code</i>	<i>data</i>		

Diesel engine	4HP BOSCH EDC16CP39	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	4HR BOSCH EDC16CP39	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	4HS BOSCH EDC16CP39	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	4HT BOSCH EDC16CP39	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHL SIEMENS SID 803	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	RHR SIEMENS SID 803	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	RHS BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Service
AT ECU	AM6 automatic gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	4HP20 automatic gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Diesel fuel additive control unit	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
ABS	ESP BOSCH8	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Air bag	Airbag ECU	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Built -in systems interface(BSI)	<i>Info</i>	<i>err. code</i>			
Driving assistance/Comfort	Parking assistance	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Drivers seat memory unit	<i>Info</i>	<i>err. code</i>			
	Air conditioning	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Under inflation detection	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Power steering	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
Inform the driver/Audio/Communication	Radio	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	CD player	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Instrument panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Steering wheel switching module	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Hands Free Kit	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Telamatics	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
Vehicle protection/Management of accesses	Alarm	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Driver's door module	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Passenger door module	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
Visibility/Lighting/Sign	Rain/Brightness sensor	<i>Info</i>	<i>err. code</i>			
PEUGEOT 806						
Petrol engine	R6F MM4.8P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation

Petrol engine	RFN MM4.8P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
Diesel engine	RHW BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHZ BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
ABS	BOSCH ABS5.3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
AT	AL4 autoadaptive automatic gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Air bag	Air bag and seat belt	<i>Info</i>	<i>err. code</i>			1.Marchting
Additional heating		<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
PEUGEOT 807 VAN						
Diesel engine	RHW BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHM BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHT BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	4HW BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
ABS	ABR BOSCH 5.7	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	ESP BOSCH 5.7	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
Driver information	Display/Telematics	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Warning light and odometer ECU	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Parking assistance	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	CD player	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Instrument panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Switch unit under steering wheel(COM 2000)	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	radio/telematic receive control	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
Visibility/Lighting	Switch unit under steering wheel(COM 2000)	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Right headlamp beam corrector	<i>Info</i>	<i>err. code</i>	<i>data</i>		

	Left headlamp beam level corrector	<i>Info</i>	<i>err. code</i>	<i>data</i>		
switch control	Driver's door module	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Sliding side door	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Passenger's door module	<i>Info</i>	<i>err. code</i>	<i>data</i>		
A/C	WEBASTO additional heating	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Climate control	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Air bag	Air bag	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Diesel fuel additive control	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Alarm	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Storing of the driving position	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	BSI	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Petrol engine	3FZ MM4MP2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	3FZ MM6LP	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	R6F MM4.8P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
	RFN MM48P(Mechanical throttle housing)	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	RFN MM4MP2(Motorised butterfly)	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RFN MM6LP	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Initialization Adapation
	XFW BOSCH ME746	<i>Info</i>	<i>err. code</i>	<i>data</i>		
PEUGEOT 807 CAN						
	BSI	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.keys of
Petrol engine	RFJ MM6LPB	<i>Info</i>	<i>err. code</i>			
	4HW BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Configuration of part mileage
	4HP EDC16CP39	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Filter
	4HR EDC16CP39	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Filter

Diesel engine	4HS EDC16CP39	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Filter
	4HT EDC16CP39	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Filter
	RHK SIEMENS SID 803	<i>Info</i>	<i>err. code</i>			
	RHL SIEMENS SID 803	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	RHR SIEMENS SID 803	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	RHM BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHT BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHW BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Diesel fuel additive control unit	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
ABS	ESP ESP 8.1	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	ESP ESP_BOSCH8	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Air bag	ESP Airbag ECU	<i>Info</i>	<i>err. code</i>	<i>data</i>		
A/T	BVA AL4	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	BVA_AM6C	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Driving assistance/Comfort	Additional heating	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Air conditioning	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Driver's door module	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Drivers seat memory unit	<i>Info</i>	<i>err. code</i>			
	Parking assistance	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Power steering GEP	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Under inflation detection	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	CD player	<i>Info</i>	<i>err. code</i>		<i>Actuat.</i>	
Inform the driver/Audio/Communication	Hands Free Kit	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Instrument panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Multi -function display	<i>Info</i>	<i>err. code</i>			
	Radio	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Telematic receiver control	<i>Info</i>				
	Telematics	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Warning lights/odometer unit	<i>Info</i>	<i>err. code</i>			

Vehicle protection/Management of accesses	Alarm	<i>Info</i>	<i>err. code</i>			
	Front sunroof	<i>Info</i>	<i>err. code</i>			
	Middle sunroof	<i>Info</i>	<i>err. code</i>			
	Rear sunroof	<i>Info</i>	<i>err. code</i>			
	Passenger door module	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Sliding side doors module	<i>Info</i>	<i>err. code</i>			
Visibility/Lighting/Signalling	Left headlamp beam level corrector	<i>Info</i>	<i>err. code</i>			
	Rain/brightness sensor	<i>Info</i>	<i>err. code</i>			
	Right headlamp beam corrector	<i>Info</i>	<i>err. code</i>			
	Steering wheel switching module	<i>Info</i>	<i>err. code</i>			

PEUGEOT PARTNER

Petrol engine	HDY BOSCH MA3.1	<i>Info</i>	<i>err. code</i>			
	HDZ BOSCH MA3.1	<i>Info</i>	<i>err. code</i>			
	HFX BOSCH M7.4.4	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	KFX BOSCH MP7.3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
	KFX MM1AP	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	KFX SGEAM SL96	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation
	LFX MM1AP	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adapation 2.Ignition advance setting
	N6A BOSCH ME7.4.4	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.Initialization Adapation
	KFW SAGEM S2000	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.Initialization Adapation
	K6D SAGEM S2000	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.Initialization Adapation

	NFU BOSCH ME7.4.4	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Marching 2.Initialization Adapation
	RFN MM6LP	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Initialization Adapation
	KFW SAGEM S2000PM1	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	N6A BOSCH ME7.4.5	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	N6B BOSCH ME7.4.5	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	NFU BOSCH ME7.4.5	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	KFW SAGEM S2000PM2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	HFX MM48P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adapation
	KFW J34P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
Diesel engine	WJY LUCAS DCN2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	RHY SIEMENS SID 801	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHY BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HX BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HW BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	WJZ LUCAS DCN2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
ABS	BOSCH ABS5.3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Inform the driver/Audio/Communication	Telematics	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Instrument panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	CD player	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Radio PHILIPS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Radio CLARION	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	BSI	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.keys of
A/C	WEBASTO additional heating	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Air bag	Air bag and seat belt	<i>Info</i>	<i>err. code</i>			1.Marching
	SAC CENT AUTOLIV	<i>Info</i>	<i>err. code</i>			
Additional heating		<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
PEUGEOT PARTNER B9						
Petrol engine	N6A BOSCH ME7.4.5	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	N6B BOSCH ME7.4.5	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	NFU BOSCH ME7.4.5	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
Diesel engine	9HV EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	9HW EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	9HT EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	9HX EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	9HZ EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration

safety	ABS 8.1	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	ESP 8.1	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Air bags	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Alarm	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
Visibility/Lighting/Signalling	Rain sensor	<i>Info</i>	<i>err. code</i>			
Inform the driver/Audio/Communication	Multifunction display (EMF)	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Steering wheel switching module	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Radio	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Hands Free Kit	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Instrument panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	CD player	<i>Info</i>	<i>err. code</i>		<i>Actuat.</i>	
	Telematics	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
Driving assistance/Comfort	Parking assistance	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Configuration
	Air conditioning	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Power steering	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Under inflation	<i>Info</i>	<i>err. code</i>	<i>data</i>		
PEUGEOT EXPERT						
Petrol engine	R6F MM4.8P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Initialization Adaption
	RFN MM4.8P	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration 2.Initialization Adaption
Diesel engine	WJY LUCAS DCN2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	RHW BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHX BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHZ BOSCH EDC15C2	<i>Info</i>	<i>err. code</i>	<i>data</i>		
AT	AL4 autoadaptive automatic gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		
ABS	BOSCH ABS5.3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Air bag	Air bag and seat belt	<i>Info</i>	<i>err. code</i>			1.Marching
Additional heating		<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
PEUGEOT EXPERT 2						
Petrol engine	RFH MM6KP(EW10A)	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
Diesel engine	9HT BOSCH EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	9HU BOSCH EDC16C3 - EDC16C3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	RHG SIEMENS SID 803	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	RHL SIEMENS SID 803	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration

	RHR SIEMENS SID 803	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
Active and passive safety	ABS8_BOSCH	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	ESP_BOSCH8	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	ABS8.1	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	ESP8.1	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Airbag ECU	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Driving assistance/Comfort	Parking assistance	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Air conditioning	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Power steering	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Additional heating	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
Inform the driver/Audio/Communication	Multi -function display	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Steering wheel switching module	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
	Radio	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Instrument panel	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	Hands Free Kit	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
	CD player	<i>Info</i>	<i>err. code</i>		<i>Actuat.</i>	
	Telematics	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Configuration
Visibility/Lighting/Sign	Rain/brightness sensor	<i>Info</i>	<i>err. code</i>			

PEUGEOT BOXER

Petrol engine	MM48p 2L essence plombee	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	MM48p 2L dual	<i>Info</i>	<i>err. code</i>	<i>data</i>		
		<i>Info</i>	<i>err. code</i>	<i>data</i>		
Diesel engine	2.0L HDI BOSCH		<i>err. code</i>	<i>data</i>		

PEUGEOT BOXER 3

Active and passive safety	ABS 8.0	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	ESP 8.0	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	ASR 8.0	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Power steering	<i>Info</i>		<i>data</i>		

PEUGEOT BOXER 3 minibus

Active and passive safety	ABS 8.0	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	ESP 8.0	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	ASR 8.0	<i>Info</i>	<i>err. code</i>	<i>data</i>		
	Power steering	<i>Info</i>		<i>data</i>		

Created with

 **nitro**^{PDF} professional

download the free trial online at nitropdf.com/professional