

Systems	Sys. Info	DTC	Data Display	Action Test	Read Configure info	Configure Info	Special Function
RENAULT TWINGO							
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
variable p.a.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			key assignment; card test
interconnection unit	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
RENAULT TWINGO phase 2							
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
variable p.a.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			key assignment; card test
interconnection unit	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
RENAULT TWINGO II							
Injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Enter Injector Codes; EGR adaptives; programmed values; unlock injector control; lock injector control; Programming Reinitialisation; Fuel supply prevention; Stop fuel supply prevention; Decrement idle speed; Increment of idle speed

a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Check target teeth; Bleed hydraulic unit and braking circuits; Vehicle Parameters; Speedo Index; Sensor offsets
instrument panel	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
variable p.a.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
instrument panel	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
UPC	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Write Date Of Last After Sales Operation
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Write Date Of Last After Sales Operation
parking assis	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
uch	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Calibration
REV counter/symbol	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
RENAULT MODUS							
Injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Enter Injector Codes; EGR adaptives; programmed values; unlock injector control; lock injector control; Programming Reinitialisation; Fuel supply prevention; Stop fuel supply prevention; Decrement idle speed; Increment of idle speed

a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Check target teeth; Bleed hydraulic unit and braking circuits; Vehicle Parameters; Speedo Index
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
variable p.a.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Save clutch pedal programming; Write clutch pedal programming; steering wheel angle sensor programming
instrument panel	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Fuel Sender Calibration; Update Odometer; Oil Change Interval In Km; Oil Change Range: Current Value In Km; Oil Change Interval In Months; Oil service and odometry miles-KM
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
parking assis	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
UCH	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Programming the codes of the four valves; New vehicle storage mode deactivation
UPC	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
RENAULT CLIO							
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			

engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			key assignment; card test
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
RENAULT CLIO 2							
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			key assignment; card test
diesel injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
interconnection unit	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
RENAULT CLIO II PH 2/3/4							
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>				
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
variable p.a.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>		<i>info</i>	
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			key assignment; card test
diesel injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
interconnection unit	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
discharge lamp	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
RENAULT CLIO III							

Injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Enter Injector Codes; EGR adaptives; programmed values; unlock injector control; lock injector control; Programming Reinitialisation; Fuel supply prevention; Stop fuel supply prevention; Decrement idle speed; Increment of idle speed
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Check target teeth; Bleed hydraulic unit and braking circuits; Vehicle Parameters; Speedo Index
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		Write Transmission Oil Change Date; Converter Lock Up Adaptive; Auto-Adaptives
variable p.a.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Sensor offsets
instrument panel	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Fuel Sender Calibration; Update Odometer; Oil Change Interval In Km; Oil Change Range: Current Value In Km; Oil Change Interval In Months; Oil service and odometry miles-KM
airbag/pre-tensioners	<i>info</i>	<i>dtc</i>	<i>data</i>		<i>read</i>	<i>info</i>	Write Date Of Last After Sales Operation
UPC	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
parking assist	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	

air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>		<i>read</i>	<i>info</i>	
UCH	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Programming the codes of the four valves; New vehicle storage mode deactivation
LIGHTING	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
RENAULT THALIA/SYMBL							
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
diesel injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>				
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			key assignment; card test
interconnection unit	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
RENAULT THALIA/SYMBL. 2							
injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		Check target teeth; Bleed hydraulic unit and braking circuits; Vehicle Parameters; Speedo Index
RENAULT CLIO V6							
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			key assignment; card test
interconnection unit	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			

RENAULT CLIO V6 PH2							
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			key assignment; card test
interconnection unit	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
RENAULT KELEOS							
Injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Enter Injector Codes; EGR adaptives; programmed values; unlock injector control; lock injector control; Programming Reinitialisation; Fuel supply prevention; Stop fuel supply prevention; Decrement idle speed; Increment of idle speed
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			Steering angle sensor initialisation
variable p.a.s	<i>info</i>	<i>dtc</i>	<i>data</i>		<i>read</i>	<i>info</i>	
instrument panel	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Slope sensor adjustment
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>				
UPC	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
UCH	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
RENAULT MEGANE/SCENIC							
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			

automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	air conditioning programming; Oil change counter offset; Auto-adaptives
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>		<i>info</i>	key assignment; card test
diesel injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Enter Injector Codes; EGR adaptives; programmed values; unlock injector control; lock injector control; Programming Reinitialisation; Fuel supply prevention; Stop fuel supply prevention; Decrement idle speed; Increment of idle speed
interconnection unit	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>		<i>info</i>	
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>		<i>read</i>	<i>info</i>	
hood control	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
tyres	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
RENAULT MEGANE II							
Injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Enter Injector Codes; EGR adaptives; programmed values; unlock injector control; lock injector control; Programming Reinitialisation; Fuel supply prevention; Stop fuel supply prevention; Decrement idle speed; Increment of idle speed
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>		<i>read</i>	<i>info</i>	

a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Check target teeth; Bleed hydraulic unit and braking circuits; Vehicle Parameters; Speedo Index
variable p.a.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Sensor offsets
instrument panel	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Fuel Sender Calibration; Update Odometer; Oil Change Interval In Km; Oil Change Range: Current Value In Km; Oil Change Interval In Months; Oil service and odometry miles-KM
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>		<i>read</i>	<i>info</i>	Write Date Of Last After Sales Operation
uch	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Programming the codes of the four valves; New vehicle storage mode deactivation
upc	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
parking assis	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		Write Transmission Oil Change Date; Converter Lock Up Adaptive; Auto-Adaptives
lighting	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
sunroof	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	

RENAULT MEGANE III / SCENIC III

Created with



download the free trial online at nitropdf.com/professional

Injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Enter Injector Codes; EGR adaptives; programmed values; unlock injector control; lock injector control; Programming Reinitialisation; Fuel supply prevention; Stop fuel supply prevention; Decrement idle speed; Increment of idle speed
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Check target teeth; Bleed hydraulic unit and braking circuits; Vehicle Parameters; Speedo Index
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>		<i>read</i>	<i>info</i>	
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>		<i>read</i>	<i>info</i>	Write Date Of Last After Sales Operation
parking brake	<i>info</i>	<i>dtc</i>	<i>data</i>		<i>read</i>	<i>info</i>	
panel	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Fuel Sender Calibration; Update Odometer; Oil Change Interval In Km; Oil Change Range: Current Value In Km; Oil Change Interval In Months; Oil service and odometry miles-KM
uch	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Programming the codes of the four valves; New vehicle storage mode deactivation
upc	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			

variable p.a.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Sensor offsets
RENAULT SCENIC II							
Injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Enter Injector Codes; EGR adaptives; programmed values; unlock injector control; lock injector control; Programming Reinitialisation; Fuel supply prevention; Stop fuel supply prevention; Decrement idle speed; Increment of idle speed
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>		<i>read</i>	<i>info</i>	
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Check target teeth; Bleed hydraulic unit and braking circuits; Vehicle Parameters; Speedo Index
variable p.a.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Sensor offsets
instrument panel	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Fuel Sender Calibration; Update Odometer; Oil Change Interval In Km; Oil Change Range: Current Value In Km; Oil Change Interval In Months; Oil service and odometry miles-KM
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>		<i>read</i>	<i>info</i>	Write Date Of Last After Sales Operation

automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		Write Transmission Oil Change Date; Converter Lock Up Adaptive; Auto-Adaptives
upc	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
parking brake	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
parking assis	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
uch	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Programming the codes of the four valves; New vehicle storage mode deactivation
RENAULT LAUGNA							
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
variable p.a.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
instrument panel	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
diesel injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>		<i>info</i>	
RENAULT LAGUNA phae 2							
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
variable p.a.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
instrument panel	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			

engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>		<i>info</i>	
diesel injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
RENAULT LAGUNA II							
injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Enter Injector Codes; EGR adaptives; programmed values; unlock injector control; lock injector control; Programming Reinitialisation; Fuel supply prevention; Stop fuel supply prevention; Decrement idle speed; Increment of idle speed
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Check target teeth; Bleed hydraulic unit and braking circuits; Vehicle Parameters; Speedo Index
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>		<i>info</i>	
instrument panel	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Fuel Sender Calibration; Update Odometer; Oil Change Interval In Km; Oil Change Range: Current Value In Km; Oil Change Interval In Months; Oil service and odometry miles-KM
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		Write Transmission Oil Change Date; Converter Lock Up Adaptive; Auto-Adaptives

UCH	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Programming the codes of the four valves; New vehicle storage mode deactivation
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
discharge lamp	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
parking assistance	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
heater	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
RENAULT LAGUNA II PH2							
injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Enter Injector Codes; EGR adaptives; programmed values; unlock injector control; lock injector control; Programming Reinitialisation; Fuel supply prevention; Stop fuel supply prevention; Decrement idle speed; Increment of idle speed
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Check target teeth; Bleed hydraulic unit and braking circuits; Vehicle Parameters; Speedo Index
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>		<i>info</i>	
instrument panel	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Fuel Sender Calibration; Update Odometer; Oil Change Interval In Km; Oil Change Range: Current Value In Km; Oil Change Interval In Months; Oil service and odometry miles-KM

automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
uch	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Programming the codes of the four valves; New vehicle storage mode deactivation
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
parking brake	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
lighting	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
parking assistance	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
RENAULT LAGUNA III							
injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Enter Injector Codes; EGR adaptives; programmed values; unlock injector control; lock injector control; Programming Reinitialisation; Fuel supply prevention; Stop fuel supply prevention; Decrement idle speed; Increment of idle speed
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Steering wheel angle offset sensor
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>		<i>info</i>	
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
uch	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Programming the codes of the four valves; New vehicle storage mode deactivation
upc	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			

panel	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Fuel Sender Calibration; Update Odometer; Oil Change Interval In Km; Oil Change Range: Current Value In Km; Oil Change Interval In Months; Oil service and odometry miles-KM
parking brake	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
RENAULT SAFRANE							
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>			<i>info</i>	
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
variable p.a.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
instrument panel	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
door management	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
discharge lamp	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
RENAULT VEL SATIS							
injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
variable p.a.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
instrument panel	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
door management	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		

discharge lamp	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
tyres	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
heat	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
parking assistance	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
parking brake	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
RENAULT VEL SATIS PH2							
injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
RENAULT AVANTIME							
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
diesel injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
instrument panel	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
interconnection unit	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
heat	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
discharge lamp	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
RENAULT ESPACE							
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
instrument panel	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		

diesel injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
interconnection unit	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
door management	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
heat	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
discharge lamp	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
RENAULT ESPACE IV							
injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Enter Injector Codes; EGR adaptives; programmed values; unlock injector control; lock injector control; Programming Reinitialisation; Fuel supply prevention; Stop fuel supply prevention; Decrement idle speed; Increment of idle speed
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Check target teeth; Bleed hydraulic unit and braking circuits; Vehicle Parameters; Speedo Index
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>		<i>read</i>	<i>info</i>	
instrument panel	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Fuel Sender Calibration; Update Odometer; Oil Change Interval In Km; Oil Change Range: Current Value In Km; Oil Change Interval In Months; Oil service and odometry miles-KM
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			

airbag/pre-tensioners	<i>info</i>	<i>dtc</i>	<i>data</i>		<i>read</i>	<i>info</i>	
UCH	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Programming the codes of the four valves; New vehicle storage mode deactivation
discharge lamp	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
parking assistance	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
heat	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
hands free kit	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
parking brake	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
RENAULT ESPACE IV PH2							
injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Enter Injector Codes; EGR adaptives; programmed values; unlock injector control; lock injector control; Programming Reinitialisation; Fuel supply prevention; Stop fuel supply prevention; Decrement idle speed; Increment of idle speed
PANEL	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Fuel Sender Calibration; Update Odometer; Oil Change Interval In Km; Oil Change Range: Current Value In Km; Oil Change Interval In Months; Oil service and odometry miles-KM

a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Check target teeth; Bleed hydraulic unit and braking circuits; Vehicle Parameters; Speedo Index
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>		<i>read</i>	<i>info</i>	
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>		<i>read</i>	<i>info</i>	Write Date Of Last After Sales Operation
uch	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Programming the codes of the four valves; New vehicle storage mode deactivation
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
parking assistance	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
parking prox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>		<i>info</i>	
parking brake	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>		<i>info</i>	
lighting	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
RENAULT KANGOO							
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
diesel injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
interconnection unit	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
heat	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
RENAULT KANGOO MUX							

petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	key assignment; card test
diesel injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
interconnection unit	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
airbag/pre-tensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
RENAULT KANGOO II							
injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>		<i>info</i>	Enter Injector Codes; EGR adaptives; programmed values; unlock injector control; lock injector control; Programming Reinitialisation; Fuel supply prevention; Stop fuel supply prevention; Decrement idle speed; Increment of idle speed
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			Check target teeth; Bleed hydraulic unit and braking circuits; Vehicle Parameters; Speedo Index
air conditioning	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
variable p.a.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		

instrument panel	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Fuel Sender Calibration; Update Odometer; Oil Change Interval In Km; Oil Change Range: Current Value In Km; Oil Change Interval In Months; Oil service and odometry miles-KM
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
UCH	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
UPC	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
PARKING ASSIS	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
ADAPTATION	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
RENAULT TRAFIC							
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
diesel injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
RENAULT TRAFIC II							
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>		<i>read</i>		
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
diesel injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>		<i>read</i>		
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
interconnection unit	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
heat	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
RENAULT TRAFIC II PH2/3							

injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>		<i>info</i>	Enter Injector Codes; EGR adaptives; programmed values; unlock injector control; lock injector control; Programming Reinitialisation; Fuel supply prevention; Stop fuel supply prevention; Decrement idle speed; Increment of idle speed
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>		<i>read</i>	<i>info</i>	
abs	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			Check target teeth; Bleed hydraulic unit and braking circuits; Vehicle Parameters; Speedo Index
uch	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
RENAULT MASTER							
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
diesel injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
interconnection unit	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>		<i>info</i>	
RENAULT MASTER PH 2							
diesel injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>		<i>read</i>	<i>info</i>	
interconnection unit	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		

RENAULT MASTER RWD							
interconnection unit	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>				
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
RENAULT MASTER RWD PH3							
injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
RENAULT MASTER PH3							
injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Enter Injector Codes; EGR adaptives; programmed values; unlock injector control; lock injector control; Programming Reinitialisation; Fuel supply prevention; Stop fuel supply prevention; Decrement idle speed; Increment of idle speed
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Check target teeth; Bleed hydraulic unit and braking circuits; Vehicle Parameters; Speedo Index
UCH	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Programming the codes of the four valves; New vehicle storage mode deactivation
parking assis	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
RENAULT MASCOTT							

interconnection unit	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>				
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
RENAULT SPIDER							
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>				
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
RENAULT SUPER 5							
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
RENAULT EXTRA							
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>				
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
RENAULT R 19							
engine immobiliser	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
automatic gearbox	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>			
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>				
RENAULT R 21/SAVANNA							
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
RENAULT R25							
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
RENAULT ALPINE							
petrol injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
RENAULT LOGAN							

airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Enter Injector Codes; EGR adaptives; programmed values; unlock injector control; lock injector control; Programming Reinitialisation; Fuel supply prevention; Stop fuel supply prevention; Decrement idle speed; Increment of idle speed
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Check target teeth; Bleed hydraulic unit and braking circuits; Vehicle Parameters; Speedo Index
pas	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
uch	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
at	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		Write Date Of Last After Sales Operation; Write Transmission Oil Change Date; Converter Lock Up Adaptive; Auto-Adaptives
RENAULT SANDERO							
airbag/pretensioners	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		

injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Enter Injector Codes; EGR adaptives; programmed values; unlock injector control; lock injector control; Programming Reinitialisation; Fuel supply prevention; Stop fuel supply prevention; Decrement idle speed; Increment of idle speed
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	Check target teeth; Bleed hydraulic unit and braking circuits; Vehicle Parameters; Speedo Index
pas	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
uch	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		
at	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>		Write Date Of Last After Sales Operation; Write Transmission Oil Change Date; Converter Lock Up Adaptive; Auto-Adaptives
56153							
injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
E33							
injection	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	
a.b.s	<i>info</i>	<i>dtc</i>	<i>data</i>	<i>action</i>	<i>read</i>	<i>info</i>	

Created with

 **nitro**^{PDF} professional

download the free trial online at nitropdf.com/professional

Created with

 **nitro**^{PDF} professional

download the free trial online at nitropdf.com/professional

Created with

 
 **nitro**^{PDF} professional

download the free trial online at nitropdf.com/professional

Created with

 **nitro**^{PDF} professional

download the free trial online at nitropdf.com/professional



Created with

 **nitro**^{PDF} professional

download the free trial online at nitropdf.com/professional