

## Skoda Ver.: 24.80

MODEL	SYSTEM	TYPE	System Info.	Read-Clear Dtc	Data stream	Actuation	Specail functions
Fabia	03 Brake Electronics	(..-03)	info	err.code	data	actuat.	spec.
	03 Brake Electronics	(01-..)	info	err.code	data	actuat.	spec.
	15 Airbags	(..-03)	info	err.code	data	actuat.	spec.
	49 Auto. Lighting switch	(..-00)	info	err.code	data	actuat.	spec.
	02 Transmission Electronicsl	(..-00)	info	err.code	data	actuat.	spec.
	71 Battery charger	(..-00)	info	err.code	data	actuat.	spec.
	61 Battery control	(..-00)	info	err.code	data	actuat.	spec.
	43 BRAKER BOOST.ASSI.	(..-00)	info	err.code	data	actuat.	spec.
	46 Central Control Module	(..-00)	info	err.code	data	actuat.	spec.
	CHASSIS NETWORK	(..-03)	info	err.code	data	actuat.	spec.
	CLIMA	(..-03)	info	err.code	data	actuat.	spec.
	CONV. TOP/SUNROO	(..-00)	info	err.code	data	actuat.	spec.
	DASHBOARD	(..-00)	info	err.code	data	actuat.	spec.
	DISTANCE REGULATI	(..-00)	info	err.code	data	actuat.	spec.
	DRIVER FOOT BOAR	(..-00)	info	err.code	data	actuat.	spec.
	DRIVER SIDE DOOR	(..-00)	info	err.code	data	actuat.	spec.
	ELECTRIC ACTUATIO	(..-00)	info	err.code	data	actuat.	spec.
	ELECTRIC STEERING	(..-03)	info	err.code	data	actuat.	spec.
	EMERGENCY CALL	(..-00)	info	err.code	data	actuat.	spec.
	ENGINE MANAGEME	(..-03)	info	err.code	data	actuat.	spec.
	ENGINE MANAGEME	(..-03)	info	err.code	data	actuat.	spec.
	ENGINE MANAGEME	(..-03)	info	err.code	data	actuat.	spec.
	ENGINE MANAGEME	(..-00)	info	err.code	data	actuat.	spec.
	ENGINE MANAGEME	(..-00)	info	err.code	data	actuat.	spec.
	FRONT CONTR.INDIC	(..-00)	info	err.code	data	actuat.	spec.
	IMMOBILIZER	(..-00)	info	err.code	data	actuat.	spec.
	LEFT REAR DOOR	(..-00)	info	err.code	data	actuat.	spec.
	LH RIGHT MODULATI	(..-00)	info	err.code	data	actuat.	spec.
	PARK.BRAKE	(..-00)	info	err.code	data	actuat.	spec.
	PASS. SIDE DOOR	(..-00)	info	err.code	data	actuat.	spec.
	PASS.FOOT BOARD	(..-00)	info	err.code	data	actuat.	spec.
	PASSIVE ENTRY	(..-00)	info	err.code	data	actuat.	spec.
POWER BRAKE	(..-00)	info	err.code	data	actuat.	spec.	
REAR CONTROL INDI	(..-00)	info	err.code	data	actuat.	spec.	
RH LIGHT MODULATI	(..-00)	info	err.code	data	actuat.	spec.	
RIGHT REAR DOOR	(..-00)	info	err.code	data	actuat.	spec.	
SERVICE LIGHT RES	(99-..)	info	err.code	data	actuat.	spec.	
SWITCH PANEL	(..-00)	info	err.code	data	actuat.	spec.	
VOICE CONTROL	(..-00)	info	err.code	data	actuat.	spec.	
Favorit	ENGINE MANAGEME	(..-6/98)	info	err.code	data	actuat.	spec.
	ENGINE MANAGEME	(..-6/98)	info	err.code	data	actuat.	spec.
	ENGINE MANAGEME	(..-6/98)	info	err.code	data	actuat.	spec.

Felicia	03 Brake Electronics	(..-03)	info	err.code	data	actuat.	spec.
	15 Airbags	(..-03)	info	err.code	data	actuat.	spec.
	02 Transmission Electronicsl	(..-00)	info	err.code	data	actuat.	spec.
	46 Central Control Module	(..-00)	info	err.code	data	actuat.	spec.
	CHASSIS NETWORK	(..-03)	info	err.code	data	actuat.	spec.
	CLIMA	(..-03)	info	err.code	data	actuat.	spec.
	DASHBOARD	(..-00)	info	err.code	data	actuat.	spec.
	ENGINE MANAGEME	(..-03)	info	err.code	data	actuat.	spec.
	ENGINE MANAGEME	(..-03)	info	err.code	data	actuat.	spec.
	ENGINE MANAGEME	(..-03)	info	err.code	data	actuat.	spec.
	IMMOBILIZER	(..-00)	info	err.code	data	actuat.	spec.
Forman	ENGINE MANAGEME	(..-6/98)	info	err.code	data	actuat.	spec.
	ENGINE MANAGEME	(..-6/98)	info	err.code	data	actuat.	spec.
	ENGINE MANAGEME	(..-6/98)	info	err.code	data	actuat.	spec.
Octavia	03 Brake Electronics	(01-..)	info	err.code	data	actuat.	spec.
	03 Brake Electronics	(04-..)	info	err.code	data	actuat.	spec.
	15 Airbags	(..-03)	info	err.code	data	actuat.	spec.
	15 Airbags	(04-..)	info	err.code	data	actuat.	spec.
	25 Immobilizer	(..-00)	info	err.code	data	actuat.	spec.
	49 Auto. Lighting switch	(..-00)	info	err.code	data	actuat.	spec.
	02 Transmission Electronicsl	(..-00)	info	err.code	data	actuat.	spec.
	7D Auxiliary Heater	(04-..)	info	err.code	data	actuat.	spec.
	71 Battery charger	(..-00)	info	err.code	data	actuat.	spec.
	61 Battery control	(..-00)	info	err.code	data	actuat.	spec.
	43 BRAKER BOOST.ASSI.	(..-00)	info	err.code	data	actuat.	spec.
	CENTRAL ELECTRIC	(04-..)	info	err.code	data	actuat.	spec.
	46 Central Control Module	(..-00)	info	err.code	data	actuat.	spec.
	CHASSIS NETWORK	(..-03)	info	err.code	data	actuat.	spec.
	CLIMA	(..-03)	info	err.code	data	actuat.	spec.
	CLIMA	(04-..)	info	err.code	data	actuat.	spec.
	COMFORT SYSTEM	(..-03)	info	err.code	data	actuat.	spec.
	COMFORT SYSTEM	(04-..)	info	err.code	data	actuat.	spec.
	CONV. TOP/SUNROO	(..-00)	info	err.code	data	actuat.	spec.
	CONV. TOP/SUNROO	(04-..)	info	err.code	data	actuat.	spec.
	CRUISE CONTROL	(..-00)	info	err.code	data	actuat.	spec.
	DASHBOARD	(..-00)	info	err.code	data	actuat.	spec.
	DASHBOARD	(04-..)	info	err.code	data	actuat.	spec.
	DRIVER FOOT BOAR	(..-00)	info	err.code	data	actuat.	spec.
	DRIVER SIDE DOOR	(..-00)	info	err.code	data	actuat.	spec.
	DRIVER SIDE DOOR	(04-..)	info	err.code	data	actuat.	spec.
	ELECTRIC ACTUATIO	(..-00)	info	err.code	data	actuat.	spec.
	ELECTRIC STEERING	(..-03)	info	err.code	data	actuat.	spec.
	ELECTRIC STEERING	(04-..)	info	err.code	data	actuat.	spec.
	EMERGENCY CALL	(..-00)	info	err.code	data	actuat.	spec.
	ENGINE MANAGEME	(..-03)	info	err.code	data	actuat.	spec.
	ENGINE MANAGEME	(..-03)	info	err.code	data	actuat.	spec.

	ENGINE MANAGEME	(..-03)	info	err.code	data	actuat.	spec.
	ENGINE MANAGEME	(04-..)	info	err.code	data	actuat.	spec.
	ENGINE MANAGEME	(..-00)	info	err.code	data	actuat.	spec.
	ENGINE MANAGEME	(..-00)	info	err.code	data	actuat.	spec.
	FRONT CONTR.INDIC	(..-00)	info	err.code	data	actuat.	spec.
	HEADLIGHT LEVEL	(..-03)	info	err.code	data	actuat.	spec.
	IMMOBILIZER	(..-00)	info	err.code	data	actuat.	spec.
	IMMOBILIZER	(04-..)	info	err.code	data	actuat.	spec.
	LEFT REAR DOOR	(..-00)	info	err.code	data	actuat.	spec.
	LEFT REAR DOOR	(04-..)	info	err.code	data	actuat.	spec.
	LH RIGHT MODULATI	(..-00)	info	err.code	data	actuat.	spec.
	PARK.BRAKE	(..-00)	info	err.code	data	actuat.	spec.
	PASS. SIDE DOOR	(..-00)	info	err.code	data	actuat.	spec.
	PASS. SIDE DOOR	(04-..)	info	err.code	data	actuat.	spec.
	PASS.FOOT BOARD	(..-00)	info	err.code	data	actuat.	spec.
	PASSIVE ENTRY	(..-00)	info	err.code	data	actuat.	spec.
	POWER BRAKE	(..-00)	info	err.code	data	actuat.	spec.
	RADIO / CD	(04-..)	info	err.code	data	actuat.	spec.
	REAR CONTROL INDI	(..-00)	info	err.code	data	actuat.	spec.
	RH LIGHT MODULATI	(..-00)	info	err.code	data	actuat.	spec.
	RIGHT REAR DOOR	(..-00)	info	err.code	data	actuat.	spec.
	RIGHT REAR DOOR	(04-..)	info	err.code	data	actuat.	spec.
	SEAT/MIRROR POS.	(..-00)	info	err.code	data	actuat.	spec.
	SERVICE LIGHT RES	(..-00)	info	err.code	data	actuat.	spec.
	SERVICE LIGHT RES	(04-..)	info	err.code	data	actuat.	spec.
	SERVICE LIGHT RES	(99-..)	info	err.code	data	actuat.	spec.
	STEERING WHEEL	(..-00)	info	err.code	data	actuat.	spec.
	STEERING WHEEL	(04-..)	info	err.code	data	actuat.	spec.
	SWITCH PANEL	(..-00)	info	err.code	data	actuat.	spec.
	TRACTION CONTROL	(..-00)	info	err.code	data	actuat.	spec.
	TV SYSTEM	(..-00)	info	err.code	data	actuat.	spec.
	VOICE CONTROL	(..-00)	info	err.code	data	actuat.	spec.
Pick-up	03 Brake Electronics	(..-03)	info	err.code	data	actuat.	spec.
	15 Airbags	(..-03)	info	err.code	data	actuat.	spec.
	7D Auxiliary Heater	(..-00)	info	err.code	data	actuat.	spec.
	46 Central Control Module	(..-00)	info	err.code	data	actuat.	spec.
	CLUTCH ELECTRONI	(..-00)	info	err.code	data	actuat.	spec.
	DASHBOARD	(..-00)	info	err.code	data	actuat.	spec.
	DRIVER SEAT CONTR	(..-00)	info	err.code	data	actuat.	spec.
	ENGINE MANAGEME	(..-03)	info	err.code	data	actuat.	spec.
	ENGINE MANAGEME	(..-03)	info	err.code	data	actuat.	spec.
	ENGINE MANAGEME	(..-03)	info	err.code	data	actuat.	spec.
	IMMOBILIZER	(..-00)	info	err.code	data	actuat.	spec.
	PARKING HELP	(..-00)	info	err.code	data	actuat.	spec.
	RADIO / CD	(..-03)	info	err.code	data	actuat.	spec.
	SUSPENSION CONTR	(..-00)	info	err.code	data	actuat.	spec.

before  
2007

42 DRIVER -DOOR ELECT.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
52 PASSE. -DOOR ELECT.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
62 LR-DOOR ELECTRONI.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
72 RR -DOOR ELECTRONI.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
23 BRAKER BOOSTER	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
43 BRAKER BOOST.ASSI.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
63 DRVS BOARDING ASS1	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
73 DRVS BOARDING ASS2	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
54 Rear spoiler	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
05 ACCESS & PERMISSI.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
06 PASSENE. SEAT ADJ.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
07 DISPLAY -/CNTL UNIT	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
27 DIS./CTL UNIT REAR	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
57 TV-TUNER	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
67 VOICE CONTROL	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
77 TELEPHONE	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
38 ROOF ELECTRONICS	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
48 DRVS SEAT ADJ.REAR	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
68 WIPER ELECTRONICS	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
78 SLIDING DOOR	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
59 TOWING PROTECTION	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
69 TRAILER FUNCTION	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
28 Climate Control Unit Rear	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
31 Engine Electronics Conjunct.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
32 Locking Electronisc	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
53 Parking Brake	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
58 Auxiliary Fuel Tank	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
64 Stabilizers	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
1C Vehicle Position Detection	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
2D Voice Amplification	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
3D Special Function	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
6E Roof Display/Control Head	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
7E Ind.Unit in Inst.Panel Ins.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
0D Sliding Door Left	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
7D Auxiliary Heater	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
0F Radio Tuner -Digital	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
1F Radio Satellite	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
2F TV Tuner -Digital	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
04 Steering Position	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
74 Vehicle Control System	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
3C Lane Departure Assistance System	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
4C Tyre Pressure Monitor II	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
5C Lane Keeping Assistance System	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
6C Rear Camera	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
5D Optertion	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
6D Electronic Equipment of Trunk Lid	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>

0B Auxiliary Air Heater	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
5F Information Electronic Equipment 1	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
6F Confort Central Control Unit II	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
1B Power -Assisted Steering	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
10 Parking Assist System 2	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
7F Left Slide Door	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
01 Engine electronics	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
11 Engine electronics 2	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
21 Engine electronics 3	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
02 Transmission Electronics	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
03 Brake Electronics	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
08 AC/Heating electronics	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
25 Immobilizer	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
47 Soundsystem	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
12 Clutch electronics	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
34 Self leveling suspension	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
15 Airbags	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
16 Steering Wheel Electronics	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
44 Steering assistance	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
35 Central Locking	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
14 Wheel damping electronics	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
17 Instrument Cluster	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
18 Aux heating	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
13 Distance control	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
19 Gateway data bus	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
26 Electric roof control	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
29 Left light control	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
39 Right light control	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
37 Navigation	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
45 Interior Monitoring	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
46 Central Control Module	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
49 Auto. Lighting switch	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
51 Electric drive	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
61 Battery control	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
75 Emergency call module	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
76 Parking aid	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
09 Electronic Ctrl Electronics	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
22 4WD Electronics	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
24 Drive slip control	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
36 Driver's side seat adj.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
41 Diesel pump electronics	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
55 Headlight range control	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
56 Radio	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
65 Type pressure monitoring	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
66 Seat -/mirror adjust.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
71 Battery charger	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>

42 DRIVER -DOOR ELECT.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
52 PASSE. -DOOR ELECT.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
62 LR-DOOR ELECTRONI.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
72 RR -DOOR ELECTRONI.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
23 BRAKER BOOSTER	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
43 BRAKER BOOST.ASSI.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
63 DRVS BOARDING ASS1	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
73 DRVS BOARDING ASS2	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
54 Rear spoiler	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
05 ACCESS & PERMISSI.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
06 PASSENE. SEAT ADJ.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
07 DISPLAY -/CNTL UNIT	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
27 DIS./CTL UNIT REAR	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
57 TV-TUNER	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
67 VOICE CONTROL	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
77 TELEPHONE	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
38 ROOF ELECTRONICS	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
48 DRVS SEAT ADJ.REAR	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
68 WIPER ELECTRONICS	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
78 SLIDING DOOR	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
59 TOWING PROTECTION	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
69 TRAILER FUNCTION	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
28 Climate Control Unit Rear	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
31 Engine Electronics Conjunct.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
32 Locking Electronisc	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
53 Parking Brake	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
58 Auxiliary Fuel Tank	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
64 Stabilizers	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
1C Vehicle Position Detection	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
2D Voice Amplification	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
3D Special Function	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
6E Roof Display/Control Head	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
7E Ind.Unit in Inst.Panel Ins.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
0D Sliding Door Left	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
7D Auxiliary Heater	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
0F Radio Tuner -Digital	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
1F Radio Satellite	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
2F TV Tuner -Digital	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
04 Steering Position	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
74 Vehicle Control System	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
3C Lane Departure Assistance System	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
4C Tyre Pressure Monitor II	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
5C Lane Keeping Assistance System	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
6C Rear Camera	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
5D Optertion	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
6D Electronic Equipment of Trunk Lid	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>

0B Auxiliary Air Heater	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
5F Information Electronic Equipment 1	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
6F Confort Central Control Unit II	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
1B Power -Assisted Steering	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
10 Parking Assist System 2	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
7F Left Slide Door	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
01 Engine electronics	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
11 Engine electronics 2	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
44 Steering assistance	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
05 ACCESS & PERMISSI.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
21 Engine electronics 3	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
31 Engine Electronics Conjunct.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
61 Battery control	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
02 Transmission Electronics	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
22 4WD Electronics	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
42 DRIVER -DOOR ELECT.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
52 PASSE. -DOOR ELECT.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
62 LR-DOOR ELECTRONI.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
62 RR-DOOR ELECTRONI.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
03 Brake Electronics	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
13 Distance control	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
53 Parking Brake	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
34 Self leveling suspension	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
15 Airbags	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
25 Immobilizer	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
55 Headlight range control	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
65 Tyre pressure monitoring	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
75 Emergency call module	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
06 PASSENE. SEAT ADJ.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
16 Steering Wheel Electronics	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
26 Electric roof control	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
36 Driver`s side seat adj.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
46 Central Control Module	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
56 Radio	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
66 Seat -/mirror adjust.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
76 Parking aid	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
1D Driver identification	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
3D Special Function	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
07 DISPLAY -/CNTL UNIT	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
17 Instrument Cluster	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
37 Navigation	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
47 Soundsystem	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
57 TV-TUNER	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
67 VOICE CONTROL	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
77 TELEPHONE	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
0E Media player position 1	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>

1E Media player position 2	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
2E Media player position 3	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
3E Media player position 4	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
4E Control head RR	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
5E Control head LR	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
7E Ind.Unit in Inst.Panel Ins.	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
08 AC/Heating electronics	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
18 Aux heating	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
28 Climate Control Unit Rear	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
38 ROOF ELECTRONICS	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
7D Auxiliary Heater	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
09 Electronic Ctrl Electronics	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
19 Gateway data bus	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
69 TRAILER FUNCTION	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
0F Radio Tuner -Digital	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
1F Radio Satellite	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
2F TV Tuner -Digital	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
4F Electronic central electric II	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
04 Steering Position	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
74 Vehicle Control System	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
3C Lane Departure Assistance System	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
4C Tyre Pressure Monitor II	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
5C Lane Keeping Assistance System	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
6C Rear Camera	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
5D Opertion	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
6D Electronic Equipment of Trunk Lid	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
0B Auxiliary Air Heater	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
5F Information Electronic Equipment 1	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
6F Confort Central Control Unit II	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
1B Power -Assisted Steering	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
10 Parking Assist System 2	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
20 High Beam Assistance Device	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
30 Special Function 2	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>
7F Left Slide Door	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<i>spec.</i>