

## Daihatsu Ver.:19.00

Vehicle	Year	Engine Type	System	Read-Clear Dtc	Data Stream	Actuation	Special Function	Others		
	00/10-01/06	EF-DET(Mechanism AT)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.			
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding			
			DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.DVS Bleeding			
			A/B	<i>err.code</i>			1.Read ECU No.			
		EF-DET(Electrical Control AT)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.			
			A/T	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.A/T Learning Value Initialization			
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding			
			DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.DVS Bleeding			
			A/B	<i>err.code</i>			1.Read ECU No.			
		EF-SE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.			
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding			
			A/B	<i>err.code</i>			1.Read ECU No.			
		EF-VE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.			
			CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No.			
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.			
			DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.DVS Bleeding			
			A/B	<i>err.code</i>			1.Read ECU No.			
		EF-VE2	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.			
			CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No.			
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding			
			EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.			
			A/B	<i>err.code</i>			1.Read ECU No.			
					EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
					A/T	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.A/T Learning Value Initialization	

01/06-02/12

01/06-02/12	EF-DET	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
		DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.DVS Bleeding	
		A/B	<i>err.code</i>			1.Read ECU No.	
	EF-SE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		A/B	<i>err.code</i>			1.Read ECU No.	
	EF-VE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
		DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.DVS Bleeding	
		A/B	<i>err.code</i>			1.Read ECU No.	
	EF-VE2	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
A/B		<i>err.code</i>			1.Read ECU No.		
		EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	

02/12-04/12

EF-DET	A/T	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.A/T Learning Value Initialization	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	DVS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
EF-SE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	

EF-VD	EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
EF-VE	CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
EF-VN	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	A/T	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.A/T Learning Value Initialization	
	DVS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.DVS Bleeding	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	

04/12-06/12

EF-DET	EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
EF-SE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
EF-VD	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
	EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	

EF-VE(BEYOND CVT)	EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
EF-VE(CVT)	CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
EF-VN	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
	CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
	ACC	<i>err.code</i>			1.Read ECU No.	

KF-DET	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	VSC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
	EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	Power Source	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
	ERS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	

06/12-08/12

KF-VE

ABS	<i>err.code</i>	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
A/B	<i>err.code</i>			1.Read ECU No.	
KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
Power Source	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	

KF-VN	EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
	ACC	<i>err.code</i>			1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	VSC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
	EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	

KF-DET(W/O Pre-Crash)	ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	Power Source	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
	ACC	<i>err.code</i>			1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	VSC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
	EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	

08/12-

KF-DET(W/ Pre-Crash)	ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	Power Source	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
KF-VE(W/O Pre-Crash)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
	ERS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	
	ABS	<i>err.code</i>	1.Read ECU No. 2.Eco-Run ECU Initializa tion Learning 3.Delete and input Starter Working Times	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	

KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
Power Source	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
ERS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	

ABS	<i>err.code</i>	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
A/B	<i>err.code</i>			1.Read ECU No.	
KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	

		KF-VE(W/ Pre-Crash)	Power Source	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		KF-VN	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
			EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
			A/B	<i>err.code</i>			1.Read ECU No.	
		EF-DET(Mechanism AT)	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
			DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.DVS Bleeding	
			A/B	<i>err.code</i>			1.Read ECU No.	
		EF-DET(Electrical Control AT)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
			AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
			A/B	<i>err.code</i>			1.Read ECU No.	
			KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
		00/10-01/06	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
			CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	

EF-VE(W/ tyre blow -up device)	DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.DVS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
EF-VE(W/O tyre blow -up device)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
JB-DET	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.DVS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
EF-DET	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	

01/06-01/10

EF-VE(W/ tyre blow -up device)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.DVS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
EF-VE(W/O device)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
JB-DET	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.DVS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	

01/10-02/10

EF-DET	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
EF-VE(W/ tyre blow -up device)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.DVS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
EF-VE(W/O tyre blow -up device)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
JB-DET	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.DVS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	

02/10-04/12

EF-DET

EF-VE

AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
DVS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.DVS Bleeding	
EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
A/B	<i>err.code</i>			1.Read ECU No.	
KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
A/B	<i>err.code</i>			1.Read ECU No.	
KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	

JB-DET	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	DVS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.DVS Bleeding	
	EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	ACC	<i>err.code</i>			1.Read ECU No. 2.Radar Cruise Optical Axis Adjustment	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	DVS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	

04/12-06/10

EF-DET	EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
EF-VE(BEYOND CVT)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	AT	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

EF-VE(CVT)	EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
JB-DET	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	ACC	<i>err.code</i>			1.Read ECU No. 2.Radar Cruise Optical Axis Adjustment	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	

	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	EPS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
KF-VE	ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
	ACC	<i>err.code</i>			1.Read ECU No. 2.Radar Cruise Optical Axis Adjustment	

06/10-08/12

ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
VSC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
EPS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
A/B	<i>err.code</i>			1.Read ECU No.	
KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
Power Source	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
PSB-D	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
PSD-P	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	

KF-DET(w/ Pre-Crash)	IMG	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Camera Optical Axis Adjustment	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
	ACC	<i>err.code</i>			1.Read ECU No. 2.Radar Cruise Optical Axis Adjustment	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	VSC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
	EPS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	

			<i>err.code</i>	<i>data</i>		<ul style="list-style-type: none"> <li>1. Read ECU No.</li> <li>2. Confirm Main Key and Subkey Status</li> <li>3. Antenna connection diagnostic</li> <li>4. Wireless communication test</li> <li>5. Intelligent communication test</li> <li>6. Repeater communication test</li> </ul>	
	KF-DET(w/o Pre-Crash)	KFS			<i>actuat.</i>		
		ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1. Read ECU No.	
		Power Source	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1. Read ECU No.	
		EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1. Read ECU No.	
		CVT	<i>err.code</i>	<i>data</i>		<ul style="list-style-type: none"> <li>1. Read ECU No.</li> <li>2. CVT ECU Learning Initializing</li> </ul>	
		ACC	<i>err.code</i>			<ul style="list-style-type: none"> <li>1. Read ECU No.</li> <li>2. Radar Cruise Optical Axis Adjustment</li> </ul>	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<ul style="list-style-type: none"> <li>1. Read ECU No.</li> <li>2. ABS Bleeding</li> <li>3. 2nd bleeding</li> </ul>	
		VSC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<ul style="list-style-type: none"> <li>1. Read ECU No.</li> <li>2. ABS Bleeding</li> <li>3. 2nd bleeding</li> <li>4. 3rd bleeding</li> </ul>	

EPS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
A/B	<i>err.code</i>			1.Read ECU No.	
KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
Power Source	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
PSB-D	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
PSD-P	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
IMG	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Camera Optical Axis Adjustment	
EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	

KF-DET(w/ Smart Key/w/ Pre-Crash)

KF-DET(w/ Smart Key/w/o Pre-Crash)	ACC	<i>err.code</i>			1.Read ECU No. 2.Radar Cruise Optical Axis Adjustment	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	VSC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
	EPS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
	ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	Power Source	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	

	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
	ACC	<i>err.code</i>			1.Read ECU No. 2.Radar Cruise Optical Axis Adjustment	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	VSC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
	EPS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	

KF-DET(w/o Smart Key/w/ Pre-Crash)	ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	PSB-D	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	PSD-P	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	IMG	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Camera Optical Axis Adjustment	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
	ACC	<i>err.code</i>			1.Read ECU No. 2.Radar Cruise Optical Axis Adjustment	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	VSC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
	EPS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	

KF-DET(w/o Smart Key/w/o Pre-Crash)	KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
	ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	EPS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	

KF-VE(w/Smart Key)	KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
	ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	Power Source	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	EPS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	

			<i>err.code</i>	<i>data</i>		<ul style="list-style-type: none"> <li>1.Read ECU No.</li> <li>2.Confirm Main Key and Subkey Status</li> <li>3.Antenna connection diagnostic</li> <li>4.Wireless communication test</li> <li>5.Intelligent communication test</li> <li>6.Repeater communication test</li> </ul>	
	KF-VE(w/o Smart Key)	KFS			<i>actuat.</i>		
		ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		CVT	<i>err.code</i>	<i>data</i>		<ul style="list-style-type: none"> <li>1.Read ECU No.</li> <li>2.CVT ECU Learning Initializing</li> </ul>	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<ul style="list-style-type: none"> <li>1.Read ECU No.</li> <li>2.ABS Bleeding</li> <li>3.2nd bleeding</li> </ul>	
		EPS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<ul style="list-style-type: none"> <li>1.Torque sensor zero point adjustment(*)</li> <li>2.Read ECU No.</li> </ul>	
		A/B	<i>err.code</i>				1.Read ECU No.

		<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
	KFS			<i>actuat.</i>		
	ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
KF-DET(w/ Smart Key)	Power Source	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
KF-VE(w/ Smart Key)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	EPS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status	

09/12-

	ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	EPS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
	ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
KF-DET(w/o Smart Key)	Power Source	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	

CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
EPS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
A/B	<i>err.code</i>			1.Read ECU No.	
KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
Power Source	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

KF-VE(w/o  
Smart Key)

00/08-00/12

EJ-VE	A/B	<i>err.code</i>				1.Read ECU No.	
K3-VE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>		1.Read ECU No.	
	AT	<i>err.code</i>	<i>data</i>			1.Read ECU No. 2.A/T Learning Value Initialization	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>		1.Read ECU No. 2.ABS Bleeding	
	DVS	<i>err.code</i>	<i>data</i>			1.Read ECU No. 2.DVS Bleeding	
	A/B	<i>err.code</i>				1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>			1.Read ECU No.	
K3-VET	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>		1.Read ECU No.	
	AT	<i>err.code</i>	<i>data</i>			1.Read ECU No. 2.A/T Learning Value Initialization	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>		1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	DVS	<i>err.code</i>	<i>data</i>			1.Read ECU No. 2.DVS Bleeding	
	A/B	<i>err.code</i>				1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>			1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>		1.Read ECU No.	

00/12-

EJ-VE	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
K3-VE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	DVS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.DVS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
K3-VET	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	DVS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.	

01/01-02/01	EF-DET	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
		A/B	<i>err.code</i>			1.Read ECU No.	
		KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	EF-VE	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
		A/B	<i>err.code</i>			1.Read ECU No.	
		KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
02/01-03/05	EF-DET	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
		A/B	<i>err.code</i>			1.Read ECU No.	
		KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
		EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
		A/B	<i>err.code</i>			1.Read ECU No.	

	EF-VE	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
03/05-05/04	EF-DET	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
		A/B	<i>err.code</i>			1.Read ECU No.	
		KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	EF-VE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
		A/B	<i>err.code</i>			1.Read ECU No.	
		KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	05/05-07/08	EF-DET(A/T)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.
ABS			<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
A/B			<i>err.code</i>			1.Read ECU No.	
EF-DET		EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	

		EF-DET(M/T)	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
			A/B	<i>err.code</i>			1.Read ECU No.	
	07/08-	KF-DET	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
			A/B	<i>err.code</i>			1.Read ECU No.	
	00/07-01/06	K3-VE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
AT			<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization		
ABS			<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding		
A/B			<i>err.code</i>			1.Read ECU No.		
KFS			<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status		
01/06-	K3-VE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.		
		AT	<i>err.code</i>	<i>data</i>		1.Read ECU No.		
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding		
		A/B	<i>err.code</i>			1.Read ECU No.		
		KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status		

Aurat-  
 7/Hijet  
 Grancargo

Altis	00/03-01/09	5S-FE	EFI&AT					Use Toyota	
			A/B	<i>err.code</i>					
	01/09-06/01	2AZ-FE	EFI&AT					Toyota	
			A/B	<i>err.code</i>					
	06/01-09/01	2AZ-FE					1.Read ECU No.	Use Toyota	
	09/01-						1.Read ECU No.	Use Toyota	
	Esse	05/12-	KF-VE(A/T)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
				ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
A/B				<i>err.code</i>			1.Read ECU No.		
KF-VE(M/T)			EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.		
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding		
			A/B	<i>err.code</i>			1.Read ECU No.		
EF-DET(Mechanism AT)		EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.			
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding			
	DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.DVS Bleeding				
	A/B	<i>err.code</i>			1.Read ECU No.				

00/10-01/06

02/08	EF- DET(Electrical Control AT)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.		
		AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization		
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding		
		DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.		
	EF-SE	A/B	<i>err.code</i>			1.Read ECU No.		
		EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.		
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.		
	EF-VE	A/B	<i>err.code</i>			1.Read ECU No.		
		EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.		
		CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No.		
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.		
		DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.DVS Bleeding		
	EF-DET	A/B	<i>err.code</i>			1.Read ECU No.		
		EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.		
		AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization		
			EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	

Copen	01/06-C	EF-SE	A/B	<i>err.code</i>			1.Read ECU No.		
			EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.		
		CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No.			
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding			
		DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.DVS Bleeding			
	EF-VE	02/06-	JB-DET	A/B	<i>err.code</i>			1.Read ECU No.	
				EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
				AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
				ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
				A/B	<i>err.code</i>			1.Read ECU No.	
			IMB	<i>err.code</i>			1.Read ECU No.		
			roof	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Roof ECU Initialization		
			EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.		
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding		
			A/B	<i>err.code</i>			1.Read ECU No.		

00/05-00/12	EJ-VE	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status		
	K3-VE2	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.		
		AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization		
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding		
		DVS	<i>err.code</i>	<i>data</i>		1.Read ECU No.		
		A/B	<i>err.code</i>			1.Read ECU No.		
		KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status		
	00/12-02/01	EJ-VE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
			A/B	<i>err.code</i>			1.Read ECU No.	
KFS			<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status		
		EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.		
		AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization		

02/01-02/08

K3-VE2	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	DVS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.DVS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
EJ-VE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	DVS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.DVS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	

K3-VE	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
K3-VE2	AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	DVS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.DVS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
EJ-VE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
IC-DFT	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	

02/08-

K3-VE

K3-VE2

AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
DVS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
A/B	<i>err.code</i>			1.Read ECU No.	
KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
AT	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
DVS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.DVS Bleeding	
A/B	<i>err.code</i>			1.Read ECU No.	
KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
ACC	<i>err.code</i>			1.Read ECU No. 2.Radar Cruise Optical Axis Adjustment	

SONICA

06/06-09/04

KF-DET

ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
A/B	<i>err.code</i>			1.Read ECU No.	
KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
A/B	<i>err.code</i>			1.Read ECU No.	
KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
A/B	<i>err.code</i>			1.Read ECU No.	

		KF-VE	KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
		KF-VE	ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		03/11-05/06	EF-DET	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.
				AT	<i>err.code</i>	<i>data</i>		1.Read ECU No.
				ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding
				EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)
				A/B	<i>err.code</i>			1.Read ECU No.
				EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.
				ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding
				EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)

05/06-07/12

	EF-VE	A/B	<i>err.code</i>			1.Read ECU No.	
	EF-DET	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
		EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
		A/B	<i>err.code</i>			1.Read ECU No.	
		KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	EF-VE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
		EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
		A/B	<i>err.code</i>			1.Read ECU No.	
		KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
		EF-VE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.

KF-VE

ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
A/B	<i>err.code</i>			1.Read ECU No.	
KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
A/B	<i>err.code</i>			1.Read ECU No.	

07/12-09/12

KF-DET

KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
A/B	<i>err.code</i>			1.Read ECU No.	

		KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
	KF-VE	ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
		EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
		A/B	<i>err.code</i>			1.Read ECU No.	

09/12-

KF-DET

KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
A/B	<i>err.code</i>			1.Read ECU No.	

Terios

00/05 -05/12

				<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
		KF-VE	KFS			<i>actuat.</i>		
			ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
			EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
			AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
			EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
		K3-VE	A/B	<i>err.code</i>			1.Read ECU No.	
		K3-VET	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
			AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
			EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	

Terios  
Kid/Lucia

			A/B	<i>err.code</i>			1.Read ECU No.	
	00/11-01/11	EF-DEM	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
			A/B	<i>err.code</i>			1.Read ECU No.	
		KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No.		
		EF-DET	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	A/B		<i>err.code</i>			1.Read ECU No.		
	01/11-	EF-DEM		<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
			EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
			A/B	<i>err.code</i>			1.Read ECU No.	
KFS		<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status			
EF-DET		EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.		
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding			

			EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
			A/B	<i>err.code</i>			1.Read ECU No.	
			KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
		EF- DET(Mechanism AT)	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
			DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.DVS Bleeding	
			A/B	<i>err.code</i>			1.Read ECU No.	
			KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	00/10-01/06	EF- DET(Electrical Control AT)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
			AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
			DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.DVS Bleeding	
			A/B	<i>err.code</i>			1.Read ECU No.	
			KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	

01/06-02/12	EF-VE	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
		DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.DVS Bleeding	
		A/B	<i>err.code</i>			1.Read ECU No.	
		KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	EF-DET	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
		DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.DVS Bleeding	
		A/B	<i>err.code</i>			1.Read ECU No.	
		KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	EF-VE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
		DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.DVS Bleeding	
A/B		<i>err.code</i>			1.Read ECU No.		
KFS		<i>err.code</i>	<i>data</i>		1.Read ECU No.		
		EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	

02/12-04/04

EF-DET	AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
EF-VE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	DVS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.DVS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
EF-DET	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	

01/01 -01/05

01/01 -01/05	EF-SE	EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
		A/B	<i>err.code</i>			1.Read ECU No.	
	EF-VE	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
		EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
		A/B	<i>err.code</i>			1.Read ECU No.	
		KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	EF-VN	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
		A/B	<i>err.code</i>			1.Read ECU No.	
		EF-DET	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.
ABS			<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
A/B			<i>err.code</i>			1.Read ECU No.	
KFS			<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
EF-SE(Truck)		EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
		EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
		A/B	<i>err.code</i>			1.Read ECU No.	
EF-SE(Cargo, Atrai)		EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.	

01/05-01/09

01/05-01/09		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		A/B	<i>err.code</i>			1.Read ECU No.	
	EF-VE(Truck)	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
		EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
		A/B	<i>err.code</i>			1.Read ECU No.	
	EF-VE(Cargo, Atrai)	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
		A/B	<i>err.code</i>			1.Read ECU No.	
		KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	EF-VN	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
		A/B	<i>err.code</i>			1.Read ECU No.	
	EF-DET	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
A/B		<i>err.code</i>			1.Read ECU No.		
KFS		<i>err.code</i>	<i>data</i>		1.Read ECU No.		
		EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.	

01/09-01/10

01/09-01/10	EF-SE(Truck)	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding		
		EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.		
		A/B	<i>err.code</i>			1.Read ECU No.		
	EF-SE(Cargo, Atrai)	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.		
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding		
		A/B	<i>err.code</i>			1.Read ECU No.		
	EF-VE(Truck)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.		
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding		
		EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.		
		A/B	<i>err.code</i>			1.Read ECU No.		
	EF-VE(Cargo, Atrai)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.		
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding		
		A/B	<i>err.code</i>			1.Read ECU No.		
		KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status		
	EF-VN	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.		
		A/B	<i>err.code</i>			1.Read ECU No.		
			EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	

01/10-02/01

EF-DET	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
EF-SE(Truck)	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
EF-SE(Cargo, Atrai)	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
EF-VE(Truck)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	

02/01-04/12

EF-VE(Cargo, Atrai)	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	EF-VN	EFI	<i>err.code</i>	<i>data</i>		1.Read ECU No.
	A/B	<i>err.code</i>			1.Read ECU No.	
EF-DET	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	AT	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
EF-SE(Truck)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
EF-SE(Cargo, Atrai)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	

EF-VE(Truck)	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
	EF-VN					
EF-DET(A/T)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
EF-DET(M/T)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
EF-SE(Truck)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	

04/12-

	EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
EF-SE(Cargo, Atrai)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
EF-VE(Truck-- >A/T)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
EF-VE(Truck-- >M/T)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	EPS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	A/B	<i>err.code</i>			1.Read ECU No.	
EF-VE(Cargo-- >A/T)	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
EF-VE(Cargo--	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

BEGO

06/01-

		>M/T)	A/B	<i>err.code</i>			1.Read ECU No.			
			EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.			
		AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization				
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding				
		EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)				
		EF-VE(HV)	A/B	<i>err.code</i>		1.Read ECU No.				
		EF-VN	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.			
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding			
			A/B	<i>err.code</i>			1.Read ECU No.			
					EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
					AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
					ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
					VSC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	

		3SZ-VE	EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			A/B	<i>err.code</i>			1.Read ECU No.	
			KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
			AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
			EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			A/B	<i>err.code</i>			1.Read ECU No.	
		1KR-FE	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
		K3-VE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
			AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	04/05-05/11							

05/11-10/02

		EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
		A/B	<i>err.code</i>			1.Read ECU No.	
		KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
1KR-FE		EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		AT	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
		A/B	<i>err.code</i>			1.Read ECU No.	
		KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
		EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
		A/B	<i>err.code</i>			1.Read ECU No.	

Boon	K3-VE	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status		
		EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.		
	KJ-VET	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.A/T Learning Value Initialization		
		EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)		
		A/B	<i>err.code</i>			1.Read ECU No.		
			EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
			CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.2nd bleeding 3.3rd bleeding	
			EPS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
			A/B	<i>err.code</i>			1.Read ECU No.	

10/02 -

1KR-FE

KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
MRTER	<i>err.code</i>	<i>data</i>			
EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.2nd bleeding 3.3rd bleeding	
EPS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
A/B	<i>err.code</i>			1.Read ECU No.	

Boon Luminas	08/12-	1NR-FE					

KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<ol style="list-style-type: none"> <li>1.Read ECU No.</li> <li>2.Confirm Main Key and Subkey Status</li> <li>3.Antenna connection diagnostic</li> <li>4.Wireless communication test</li> <li>5.Intelligent communication test</li> <li>6.Repeater communication test</li> </ol>	
ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
MRTER	<i>err.code</i>	<i>data</i>			
EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
CVT	<i>err.code</i>	<i>data</i>		<ol style="list-style-type: none"> <li>1.Read ECU No.</li> <li>2.CVT ECU Learning Initializing</li> </ol>	
ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<ol style="list-style-type: none"> <li>1.Read ECU No.</li> <li>2.ABS Bleeding</li> <li>3.2nd bleeding</li> </ol>	
VSC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<ol style="list-style-type: none"> <li>1.Read ECU No.</li> <li>2.ABS Bleeding</li> <li>3.2nd bleeding</li> <li>4.3rd bleeding</li> </ol>	
EPS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	<ol style="list-style-type: none"> <li>1.Torque sensor zero point adjustment(*)</li> <li>2.Read ECU No.</li> </ol>	
A/B	<i>err.code</i>			1.Read ECU No.	

				<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
	3SZ-VE	KFS				<i>actuat.</i>		
		ITC		<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		EFI		<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		AT		<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
		ABS		<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
		DVS		<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.DVS Bleeding	
		A/B		<i>err.code</i>			1.Read ECU No.	
	EF-DET	KFS		<i>err.code</i>	<i>data</i>		1.Read ECU No.	
		EFI		<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		CVT		<i>err.code</i>	<i>data</i>		1.Read ECU No.	
		ABS		<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Max

01/10-

EF-VE

DVS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.DVS Bleeding		
A/B	<i>err.code</i>			1.Read ECU No.		
KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status		
EF-VE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
	ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
	A/B	<i>err.code</i>			1.Read ECU No.	
	KFS	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
JB-DET	4wd	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
	EF-VE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.
		CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding
		EPS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Torque sensor zero point adjustment(*) 2.Read ECU No.

Mira Cocoa	09/08-	KF-VE	A/B	<i>err.code</i>			1.Read ECU No.	
			KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
			ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
Mira Gino	02/08-04/12	EF-DET	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
			AT	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
			A/B	<i>err.code</i>			1.Read ECU No.	
		EF-VE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
			A/B	<i>err.code</i>			1.Read ECU No.	
			EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding		

MOVE Latte	04/12-08/12	EJ-VE	A/B	<i>err.code</i>			1.Read ECU No.	
		EF-VE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
			A/B	<i>err.code</i>			1.Read ECU No.	
	04/08-08/12	EF-DET	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
			AT	<i>err.code</i>	<i>data</i>		1.Read ECU No.	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding	
			EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			A/B	<i>err.code</i>			1.Read ECU No.	
			EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
			EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			A/B	<i>err.code</i>			1.Read ECU No.	

		EF-VE	KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test
		KF-DET	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.
			CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding
			EPS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Torque sensor zero point adjustment(*) 2.Read ECU No.
			A/B	<i>err.code</i>			1.Read ECU No.
			KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status
			ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.
			EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.

08/08-09/12

KF-VE

CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
EPS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
A/B	<i>err.code</i>			1.Read ECU No.	
KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Move  
Conte

09/12-

KF-DET

EPS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
A/B	<i>err.code</i>			1.Read ECU No.	
KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
CVT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.CVT ECU Learning Initializing	
ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
EPS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
A/B	<i>err.code</i>			1.Read ECU No.	

COO	06/05-	KF-VE	KFS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
			ITC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
		K3-VE	EFI	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.	
	AT		<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization		
	ABS		<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding		
	VSC		<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding		
	EPS		<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)		
	A/B		<i>err.code</i>			1.Read ECU No.		
	EFI		<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No.		

			AT	<i>err.code</i>	<i>data</i>		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
			VSC	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
			EPS	<i>err.code</i>	<i>data</i>		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
		3SZ-VE	A/B	<i>err.code</i>			1.Read ECU No.	